



Broadcast Electronics

4100 North 24<sup>th</sup> Street, Quincy, Illinois 62305 USA • Phone (217) 224-9600 • Fax (217) 224-9607 • [www.bdcast.com](http://www.bdcast.com) • [bdcast@bdcast.com](mailto:bdcast@bdcast.com)

---



# **Marti Electronics GX-500 Telephone Remote Mixer**

566-029 rev C  
April 4, 2011

## **Marti Electronics**

### **GX-500**

### **Telephone Remote Mixer**

**©2011 Broadcast Electronics. All rights reserved.**

The information in this publication is subject to improvement and change without notice. Although every effort is made to ensure the accuracy of the information in this manual, Broadcast Electronics accepts no responsibility for any errors or omissions. Broadcast Electronics reserves the right to modify and improve the design and specifications of the equipment in this manual without notice. Any modifications shall not adversely affect performance of the equipment so modified.

### **Proprietary Notice**

This document contains proprietary data of Broadcast Electronics. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, translated into any other language in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose, without the express written permission of Broadcast Electronics.

### **Trademarks**

Broadcast Electronics and the BE logo are registered trademarks of Broadcast Electronics.  
Marti Electronics and the Marti logo are registered trademarks of Broadcast Electronics.

All other trademarks are property of their respective owners.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, natural or computer, in any form or by any means, without the prior written permission of Marti Electronics.

### **Copyright**

Copyright laws protect artwork depicting circuitry in this manual.

Information in this manual is subject to change without notice and does not represent a commitment on the part of Marti Electronics.

Marti Electronics may make improvements and/or changes in this manual or in the product described herein at any time.

This product could include technical inaccuracies or typographical errors.

## **Marti Electronics Product Warranty (One-Year Limited)**

Broadcast Electronics (BE) hereby warrants all new Marti Electronics branded products, including STL systems, manufactured by BE, against any defects in material or workmanship at the time of delivery thereof, or that develop under normal use within a period of one (1) year, from the date of shipment.

BE reserves the right to repair equipment under warranty with new or refurbished equipment or parts. BE's sole responsibility with respect to any equipment or parts not conforming to this warranty is to replace or repair such equipment upon the return thereof F.O.B. to BE's factory in Quincy, Illinois, U.S.A. In the event of replacement pursuant to the foregoing warranty, only the unexpired portion of the warranty from the time of the original purchase will remain in effect for any such replacement.

This warranty shall exclude the following products, component parts and/or assemblies:

- (a) Transmitter power output tubes shall only carry the original manufacturer's or supplier's standard warranty in effect on their original shipment date.
- (b) All computers, computer peripherals, cables, hard disk drives, etc., shall only carry the manufacturer's or supplier's standard warranty in effect on their original shipment date.
- (c) "Components", defined as separate and individual parts (e.g. transistors, integrated circuits, capacitors, resistors, inductors, fans, etc), resold by BE from another manufacturer or supplier, shall only carry a 90 day warranty, effective the date of shipment. Any such 'Components' being returned for warranty claim must be (1) returned in their original packaging and (2) must be in new, unused condition.  
BE is unable to process or resolve component defects or performance concerns on components that have been soldered, installed, wired or in any way altered from new their new condition.
- (d) "Resale Equipment", defined as equipment purchased from another manufacturer or supplier, then resold by BE, shall only carry such manufacturer's or supplier's standard warranty in effect as of the original shipment date.. All warranty claims against any and all 'resale equipment' sold by BE must be filed directly with the original equipment manufacturer. BE is unable to process or resolve equipment defects or performance concerns on products or services not manufactured by BE.

This warranty shall not extend to claims resulting from any acts of God, terrorism, war, defects or failures caused by Purchaser or user abuse or misuse, operator error, or unauthorized attempts to repair or alter the equipment in any way.

Under no circumstances shall BE be responsible for indirect, incidental or consequential damages, including, but not limited to transportation costs, non-authorized repair or service costs, downtime costs, costs for substituting equipment or loss of anticipated profits or revenue, incurred by Purchaser, whether based in contract, tort or for negligence or breach of statutory duty or otherwise.

The terms of the foregoing warranty shall be null and void if the equipment has been altered or repaired without specific written authorization from BE, or if not installed according to BE's instruction manuals, including, but not limited to, the absence of proper grounding, surge (TVSS) protection on the AC circuit panel or proper lightning protection/grounding on all output circuits, or if equipment is operated under environmental conditions or circumstances other than those specifically described in BE's product literature or instruction manual which accompany the



equipment. **The warranty shall be voided if the product or subassembly is equipped with a tamper seal and that tamper seal is broken.** BE shall not be liable for any expense of any nature whatsoever incurred by the original user without prior written consent of BE. The warranty provided herein shall terminate at the end of the period set forth above. **This warranty extends only to the original Purchaser and is not transferable.** There are no third party beneficiaries of any of the provisions of this warranty. If the equipment is described as “used” equipment, it is sold as is and where is and no warranty applies unless authorized in writing.

EXCEPT AS SET FORTH HEREIN, AS TO TITLE AND AS SPECIFICALLY REQUIRED BY LAW, THERE ARE NO OTHER WARRANTIES, OR ANY AFFIRMATIONS OF FACT OR PROMISES BY BE, WITH REFERENCE TO THE EQUIPMENT, OR TO MERCHANTABILITY, FITNESS FOR A PARTICULAR APPLICATION, SIGNAL COVERAGE, INFRINGEMENT, OR OTHERWISE, WHICH EXTEND BEYOND THE DESCRIPTION OF THE EQUIPMENT ON THE FACE HEREOF.



## IMPORTANT INFORMATION

### EQUIPMENT LOST OR DAMAGED IN TRANSIT -

When delivering the equipment to you, the truck driver or carrier's agent will present a receipt for your signature. Do not sign it until you have:

1) Inspected the containers for visible signs of damage and 2) Counted the containers and compared with the amount shown on the shipping papers. If a shortage or evidence of damage is noted, insist that notation to that effect be made on the shipping papers before you sign them.

Further, after receiving the equipment, unpack it and inspect thoroughly for concealed damage. If concealed damage is discovered, immediately notify the carrier, confirming the notification in writing, and secure an inspection report. This item should be unpacked and inspected for damage WITHIN 15 DAYS after receipt. Claims for loss or damage will not be honored without proper notification of inspection by the carrier.

### RF PRODUCT TECHNICAL ASSISTANCE, REPAIR SERVICE, PARTS -

Technical assistance is available from Broadcast Electronics by letter, prepaid telephone or E-mail. Equipment requiring repair or overhaul should be sent by common carrier, prepaid, insured, and well protected. If proper shipping materials are not available, contact the RF Technical Services Department for a shipping container. Do not mail the equipment. We can assume no liability for inbound damage, and necessary repairs become the obligation of the shipper. Prior arrangement is necessary. Contact the RF Technical Services Department for a Return Authorization.

Emergency and warranty replacement parts may be ordered from the following address. Be sure to include the equipment model number, serial number, part description, and part number. Non-emergency replacement parts may be ordered directly from the Broadcast Electronics stock room at the number shown below.

### RF TECHNICAL SERVICES -

Telephone: +1 (217) 224-9617

E-Mail: [rfservice@bdcast.com](mailto:rfservice@bdcast.com)

Fax: +1 (217) 224-6258

### FACILITY CONTACTS -

Broadcast Electronics, - Quincy Facility

4100 N. 24th St. P.O. BOX 3606

Quincy, Illinois 62305

Telephone: +1 (217) 224-9600

Fax: +1 (217) 224-6258

General E-Mail: [bdcast@bdcast.com](mailto:bdcast@bdcast.com)

Web Site: [www.bdcast.com](http://www.bdcast.com)

### PARTS -

Telephone: +1 (217) 224-9617

E-Mail: [parts@bdcast.com](mailto:parts@bdcast.com)



**RETURN, REPAIR, AND EXCHANGES -**

Do not return any merchandise without our written approval and Return Authorization. We will provide special shipping instructions and a code number that will assure proper handling and prompt issuance of credit. Please furnish complete details as to circumstances and reasons when requesting return of merchandise. All returned merchandise must be sent freight prepaid and properly insured by the customer.

**MODIFICATIONS -**

Broadcast Electronics, reserves the right to modify the design and specifications of the equipment in this manual without notice. Any modifications shall not adversely affect performance of the equipment so modified.






## SAFETY PRECAUTIONS

**PLEASE READ AND OBSERVE ALL SAFETY PRECAUTIONS!!**

**ALL PERSONS WHO WORK WITH OR ARE EXPOSED TO POWER TUBES, POWER TRANSISTORS, OR EQUIPMENT WHICH UTILIZES SUCH DEVICES MUST TAKE PRECAUTIONS TO PROTECT THEMSELVES AGAINST POSSIBLE SERIOUS BODILY INJURY. EXERCISE EXTREME CARE AROUND SUCH PRODUCTS. UNINFORMED OR CARELESS OPERATION OF THESE DEVICES CAN RESULT IN POOR PERFORMANCE, DAMAGE TO THE DEVICE OR PROPERTY, SERIOUS BODILY INJURY, AND POSSIBLY DEATH.**

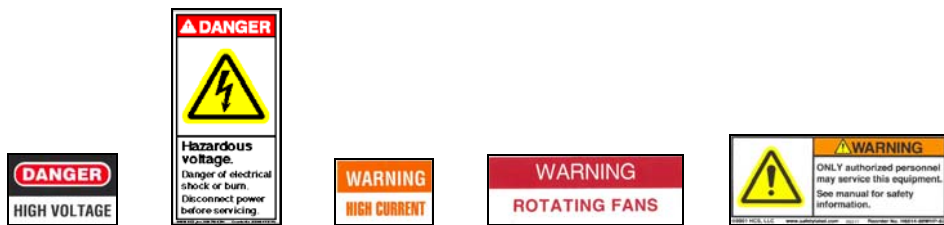

### **DANGEROUS HAZARDS EXIST IN THE OPERATION OF POWER TUBES AND POWER TRANSISTORS -**

The operation of power tubes and power transistors involves one or more of the following hazards, any one of which, in the absence of safe operating practices and precautions, could result in serious harm to personnel.

- A. HIGH VOLTAGE** - Normal operating voltages can be deadly. Additional information follows.
- B. RF RADIATION** - Exposure to RF radiation may cause serious bodily injury possibly resulting in Blindness or death. Cardiac pacemakers may be affected. Additional information follows.
- C. HOT SURFACES** - Surfaces of air-cooled radiators and other parts of tubes can reach temperatures of several hundred degrees centigrade and cause serious burns if touched. Additional information follows.
- D. RF BURNS** - Circuit boards with RF power transistors contain high RF potentials. Do not operate an RF power module with the cover removed.

## **HIGH VOLTAGE –**

Many power circuits operate at voltages high enough to kill through electrocution. Personnel should always break the primary AC Power when accessing the inside of the transmitter.

## **RADIO FREQUENCY RADIATION -**

Exposure of personnel to RF radiation should be minimized, personnel should not be permitted in the vicinity of open energized RF generating circuits, or RF transmission systems (waveguides, cables, connectors, etc.), or energized antennas. It is generally accepted that exposure to “high levels” of radiation can result in severe bodily injury including blindness. Cardiac pacemakers may be affected.

The effect of prolonged exposure to “low level” RF radiation continues to be a subject of investigation and controversy. It is generally agreed that prolonged exposure of personnel to RF radiation should be limited to an absolute minimum. It is also generally agreed that exposure should be reduced in working areas where personnel heat load is above normal. A 10 mW/cm<sup>2</sup> per one tenth hour average level has been adopted by several U.S. Government agencies including the Occupational Safety and Health Administration (OSHA) as the standard protection guide for employee work environments. An even stricter standard is recommended by the American National Standards Institute which recommends a 1.0 mW/cm<sup>2</sup> per one tenth hour average level exposure between 30 Hz and 300 MHz as the standard employee protection guide (ANSI C95.1-1982).

RF energy must be contained properly by shielding and transmission lines. All input and output RF connections, such as cables, flanges and gaskets must be RF leak proof. Never operate a power tube without a properly matched RF energy absorbing load attached. Never look into or expose any part of the body to an antenna or open RF generating tube or circuit or RF transmission system while energized. Monitor the tube and RF system for RF radiation leakage at regular intervals and after servicing.

## **HOT SURFACES –**

The power components in the transmitter are cooled by forced-air and natural convection. When handling any components of the transmitter after it has been in operation, caution must always be taken to ensure that the component is cool enough to handle without injury.





## Table of Contents

<b>1</b>	<b>INTRODUCTION.....</b>	<b>3</b>
1.1	SPECIFICATIONS .....	3
1.2	MICROPHONE CONNECTIONS.....	8
1.3	HEADPHONE CONNECTIONS .....	8
1.4	AUXILIARY INPUT CONNECTIONS .....	8
1.5	AUXILIARY OUTPUT CONNECTIONS .....	9
1.6	TELEPHONE LINE CONNECTIONS.....	9
1.7	ACCESSORY CONNECTIONS .....	9
1.8	CELLULAR TELEPHONE CONNECTIONS .....	9
1.9	OFF-AIR SIGNAL MONITORING .....	9
1.10	TELEPHONE LINE MONITORING .....	9
1.11	BATTERY SYSTEM – OVERVIEW .....	9
1.12	BATTERY SYSTEM – CHARGING.....	10
1.13	BATTERY CHARGING PROCEDURE .....	11
1.14	BATT LOW INDICATOR.....	11
<b>2</b>	<b>OPERATION.....</b>	<b>12</b>
2.1	OPERATION WITH A CELLULAR TELEPHONE .....	15
2.2	EXTERNAL AUDIO INPUT OPERATION.....	15
2.3	EXTERNAL HEADPHONE INPUT OPERATION .....	15
<b>3</b>	<b>GX-500 CONTROLS, INDICATORS, AND INPUT/OUTPUTS .....</b>	<b>15</b>
<b>4</b>	<b>ADJUSTMENTS.....</b>	<b>19</b>
4.1	MASTER GAIN CONTROL R62 & VU METER CALIBRATION CONTROL R69 .....	19
4.2	HIGH FREQUENCY EQUALIZATION CONTROL R80 AND LOW FREQUENCY EQUALIZATION CONTROL R74.....	20
4.3	INTERNAL OSCILLATOR LEVEL CONTROL R60 .....	20
<b>5</b>	<b>BILLS OF MATERIAL .....</b>	<b>21</b>
<b>6</b>	<b>SCHEMATICS .....</b>	<b>27</b>





## QUICK START

1. The GX-500 can be operated from the internal battery supply or the AC power adapter. If the unit is to be operated from an AC power supply: 1) connect the GX-500 power supply AC input cord to a 100 to 240V 50/60 Hz AC power supply receptacle and 2) connect the DC cord to the **PWR** receptacle on the rear-panel. When the unit is operated from the AC power adapter, the power supply is used to simultaneously operate the unit and charge the internal battery pack. If the unit is to be operated from the internal battery supply, no power supply connections are required.
2. Connect the telephone line cable supplied with the unit between an available telephone line jack and the GX-500 **TELE LINE 1** receptacle.
3. Connect the microphones used for the broadcast to the **MIC 1, MIC 2, MIC 3, or MIC 4** receptacle on the rear-panel. Connect the headphones used for the broadcast to the **HP 1, HP 2, HP 3, or HP 4** receptacle on the rear-panel. If a cassette recorder is being used to playback audio for the broadcast, connect the recorder to the **AUX IN A** or **AUX IN B** receptacle on the rear-panel. If a cassette recorder is being used to record the broadcast, connect the recorder to the **AUX OUT** receptacle on the rear-panel. If the station on-air signal is to be monitored using the headphones, connect a cable between the **RADIO IN** receptacle on the rear-panel and the earphone jack of a portable radio.
4. Operate the following switches to the appropriate positions:
  - A. Operate the **POWER ON/OFF** switch to **ON**.
  - B. Operate the **RADIO IN/NORMAL** switch to **NORMAL**.
  - C. Operate the **EX IN/NORMAL** switch to **NORMAL**.
  - D. Operate the **SQ MUTE/NORMAL** switch to **NORMAL**.
  - E. Operate the **CUE/MIX** switch to **MIX**.
  - F. Operate telephone line 1 **LINE SEIZE/DISCON** switch to **DISCON**.
  - G. Operate the **TONE/PULSE** switch to **TONE**.
  - H. Operate the **LINE 2 MUTE/NORMAL** switch to **NORMAL**.
  - I. Operate the **LINE 2 LINE SEIZE/DISCON** switch to **DISCON**.
5. Apply program audio to the unit and observe the LED bar graph VU meter. Adjust the **CH1-CH4** level controls until the VU bar- graph meter indicates 100% **VU** consistently on peaks and only occasionally illuminates the red LEDs on very loud sound bursts. If the microphone levels are properly set, the **LIMITING** LED will illuminate infrequently. Adjust the headphone system for a comfortable listening level using the **HEADPHONES** volume control. If a radio is connected to the **RADIO IN** receptacle, use the **RADIO IN/NORMAL** switch to select radio audio or headphone audio. Adjust the radio level using the radio volume control.
6. Operate all unused microphone channels to position 0.
7. When an incoming telephone call is routed to the unit, the GX-500 electronic ringer will chirp. To answer the call, move the line 1 **LINE SEIZE/DISCON** switch to **SEIZE**. The **LINE 1** LED will illuminate. Communicate with the calling party using the headphones and microphone. To hang-up, move the **LINE SEIZE/ DISCON** switch to **DISCON**.
8. To place a call from the unit, move the line 1 **LINE SEIZE/ DISCON** switch to **SEIZE**. Ensure the **DIAL SELECT** switch is in the **LINE 1** position (switch in). Adjust the **HEADPHONES** control if

required to detect a dial tone in the headphones. Move the **TONE/PULSE** switch to **TONE** for touch-tone dialing. If the telephone line will not respond to the touch-tones, move the **TONE/PULSE** switch to **PULSE** and re-dial the number. Leave the **LINE SEIZE/DISCON** switch in **SEIZE** position for the duration of the broadcast. During breaks, 2-way communication with the studio can be performed using the headphones.

9. If the unit is operating from the internal battery pack, the **BATT LOW** indicator will illuminate when the battery pack is almost completely discharged. The indicator will illuminate approximately 15 to 30 minutes prior to the complete discharge of the battery system. During this time period, an alternate ac power supply must be located.

When the battery supply requires recharging, the supply can be charged during on-air operation or when the unit is off-the-air. If the unit is off-the-air, ensure the **POWER ON/OFF** switch is operated to **OFF**. Connect the AC power adapter: 1) AC line cord to a 100V to 240V 50/60 Hz power supply and 2) DC cord to the PWR receptacle on the rear-panel.

Depending on the condition of the battery pack, the **BATT CHARGE** indicator will illuminate steadily or flash slow. If the **BATT CHARGE** LED illuminates steadily, this indicates the charging system is in fast-charge. This mode will last approximately 3.5 hours and allow the unit to operate for approximately 12 hours. If the **BATT CHARGE** indicator flashes on for 0.125 seconds and off for 1.375 seconds (slow flash), this indicates the charging system is in the charge pending mode. This mode slowly increases the battery voltage prior to fast charge.

When the fast charge mode has been completed, the **BATT CHARGE** indicator will flash on for 0.125 seconds and off for 0.125 seconds (fast flash). This indicates the charging system is in the top-off charge mode. This mode constantly pulses current into the batteries.

## FCC REGISTRATION NUMBERS

The unit utilizes an FCC approved electronic ringer bearing the following designations: FCC Number AZ-389G-67947-KX-N. The Ringer Equivalency Number is 0.4A, 1 B. The jack number is RJ11 C.



# 1 INTRODUCTION

The GX-500 is a telephone remote mixer designed for broadcasting remote events such as ball games (refer to Figure 1). The following text presents installation, operation, and maintenance information for the GX-500 Telephone Remote Mixer. Read the information contained in this manual before attempting to use the unit. If questions about the unit are encountered, contact *MARTI Electronics* for further assistance.


## 1.1 SPECIFICATIONS

**TABLE 1. GX-500 SPECIFICATIONS**

PARAMETER	SPECIFICATION
MIXING CHANNELS	4 Channels. Rotary Controls With Scale Reference
MICROPHONE INPUTS	4 Inputs. Active Balanced, Low Impedance
MICROPHONE CONNECTORS	XLR - Female
AUXILIARY INPUTS	2 Inputs. 600 Ohm Transformer Isolated
AUXILIARY INPUT CONNECTORS	1/4 inch Monophonic Phono Connectors.
AUXILIARY INPUT CHANNELS	Mix On Channels 3 and 4
AUXILIARY OUTPUT	1 Output. Monophonic, 600 Ohm, Transformer Isolated.
AUXILIARY OUTPUT SIGNAL	Monophonic Send Or Send/Receive Audio
AUXILIARY OUTPUT LEVEL	Mic Level: -52 dBm Or Line Level: -18 dBm
AUXILIARY OUTPUT CONNECTOR	1/4 Inch Monophonic Phono Connector, Insulated From Chassis
CUE CHANNEL	Channel 4. Routes to Headphone Audio With CUE/MIX Switch In CUE
HEADPHONE OUTPUTS	4 Outputs. 80 Ohms To 600 Ohms, Monophonic Audio
HEADPHONE OUTPUT CONNECTORS	1/4 Inch Stereophonic Phono Connectors
RADIO MONITOR INPUT	1 Input. Monophonic, Not-Amplified, Switchable
RADIO MONITOR INPUT CONNECTOR	1/4 Inch Stereophonic Phono Connector
ACCESSORY JACK SIGNALS	External Audio In, 600 Ohm, Isolated To Line. 1 Program Audio Out, 0 dBm, 600 Ohm, Transformer Isolated. Headphone Audio In, High Impedance, Unbalanced
ACCESSORY JACK	8-Pin, Female, DIN, Male Plug Provided
SQUELCH	Activated by Channel 1 & 4 Audio, Switchable
VU METER	10 LED Bargraph, 100% VU Adjustable from -9 dBm To Line Level
PEAK/LIMITING INDICATOR	LED Illuminates At -7 dBm Into Telephone Line
EQUALIZATION ADJUST	Internal, Trim Controls For High & Low Ends
PHONE LINE #1	Electronic Hybrid Powered By Telephone Line 1
PHONE LINE #2	Electronic Hybrid Powered by Telephone Line 2
PHONE LINE CONNECTORS	2 RJ11 Jacks. One Modular Cable Provided
DIALING PAD	DTMF Bursts Or Pulse
MODE SELECT SWITCH	Headphone Amplifier Input ON/OFF. AUX Out Mic/Line Level Select. Test Tone Oscillator ON/OFF. Squelch Defeat For Channels 2& 3.
INTERNAL SWITCHES	2 Switches. AUX Output Audio Send Or Send/Receive. Equalization ON/OFF
EXTERNAL SWITCHES	10 Switches. Power ON/OFF, Line 1 Seize, Line 2 Seize,

	Tone/Pulse Dialing, External Input, Radio Input, Squelch/Mute, Line 2 Mute, Channel 4 Cue/Mix, Line 1/Line 2 Dial Select.
INDICATORS/RINGERS	6-Batt Charge LED, Batt Low LED, Line 1 LED, Line 2 LED, Line 1 Electronic Ringer, Line 2 Neon Bulb Indicator
EXTERNAL POWER SUPPLY	AC Input – 100 to 240V ac 50/60 Hz. DC Output – 15 Volts dc @ 4 A. Unit requires 15 Volts dc @ 1 A.
DC OUT CONNECTOR	Provides 7.75 to 5.5 V dc @ a maximum of 0.5 A.
INTERNAL FUSE	5 fuses. Auto resetting.
BATTERY PACK	1 Pack consisting of 6 AA NiMH batteries, 1100 mAh, 7.2V
BATTERY USAGE	Up To 16 Hours With a 6 hour charge. Up to 12 hours with a 3.5 hour charge.
BATTERY CHARGING SYSTEM	Voltage, Timer, And Thermostat Termination of Charging
BATTERY CHARGING TIME	Approximately 3.5 Hrs. Varies With Charge Remaining
DIMENSIONS	9.6 inches W x 7.1 inches D x 2.8 inches H
WEIGHT	3 lbs



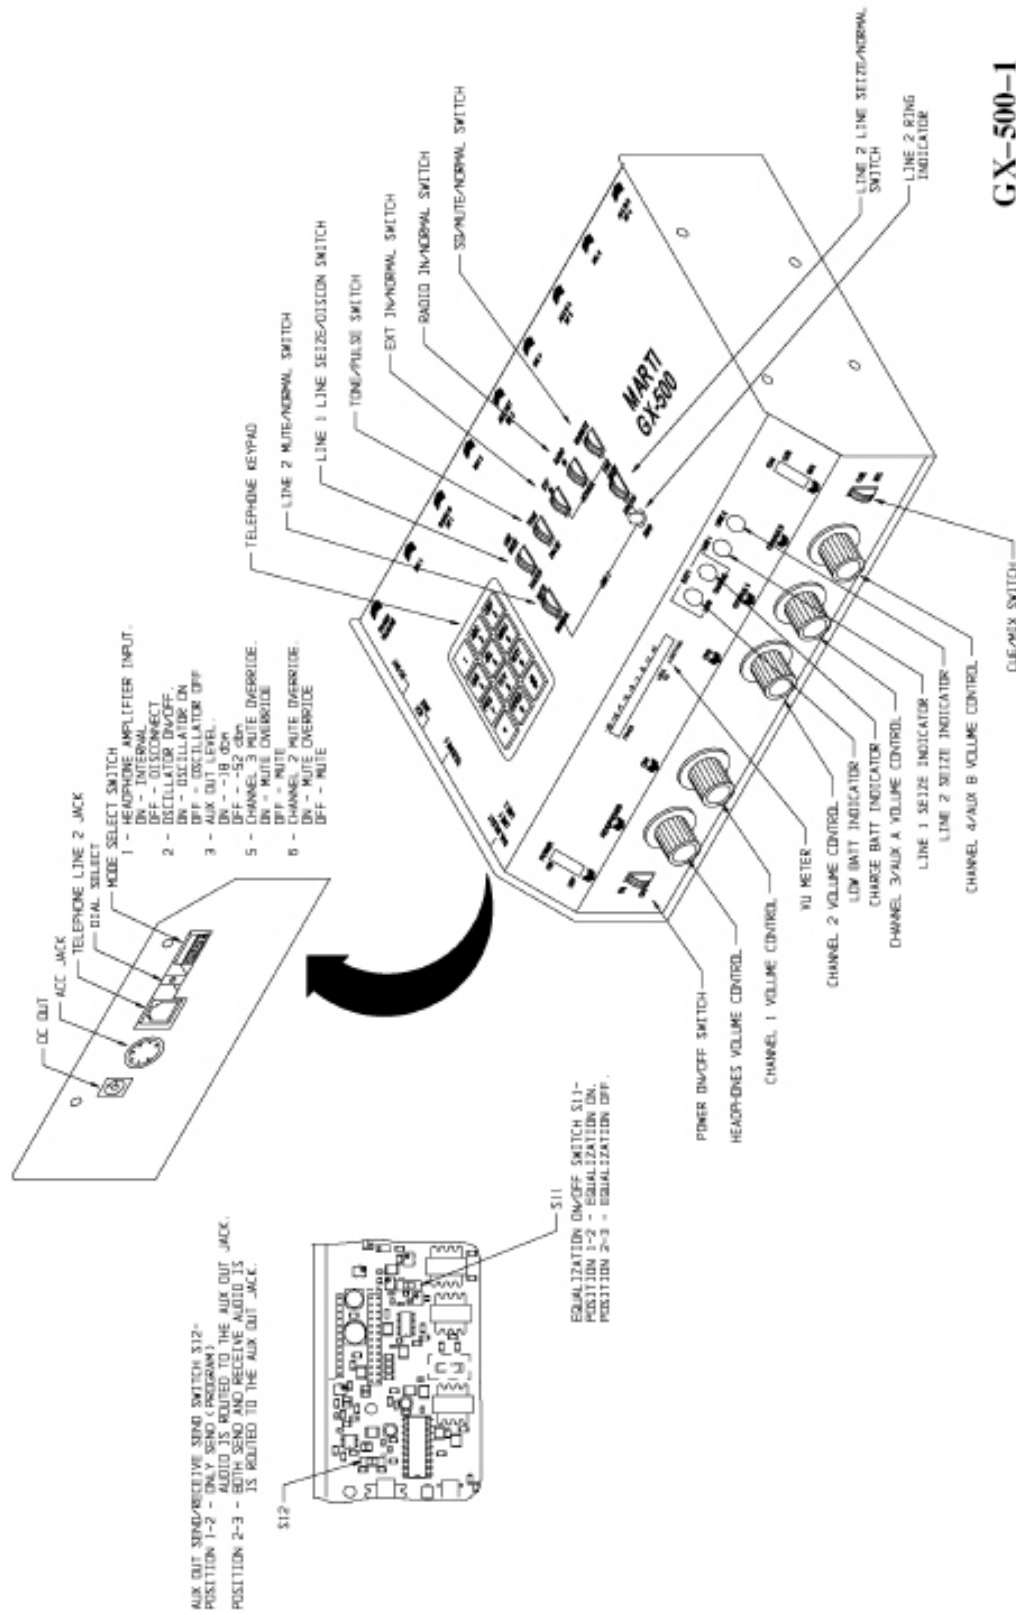

GX-500-1

COPYRIGHT © 1999 MARTI ELECTRONICS, INC

FIGURE 1. GX-500 CONTROLS AND INDICATORS (Sheet 1 of 3)

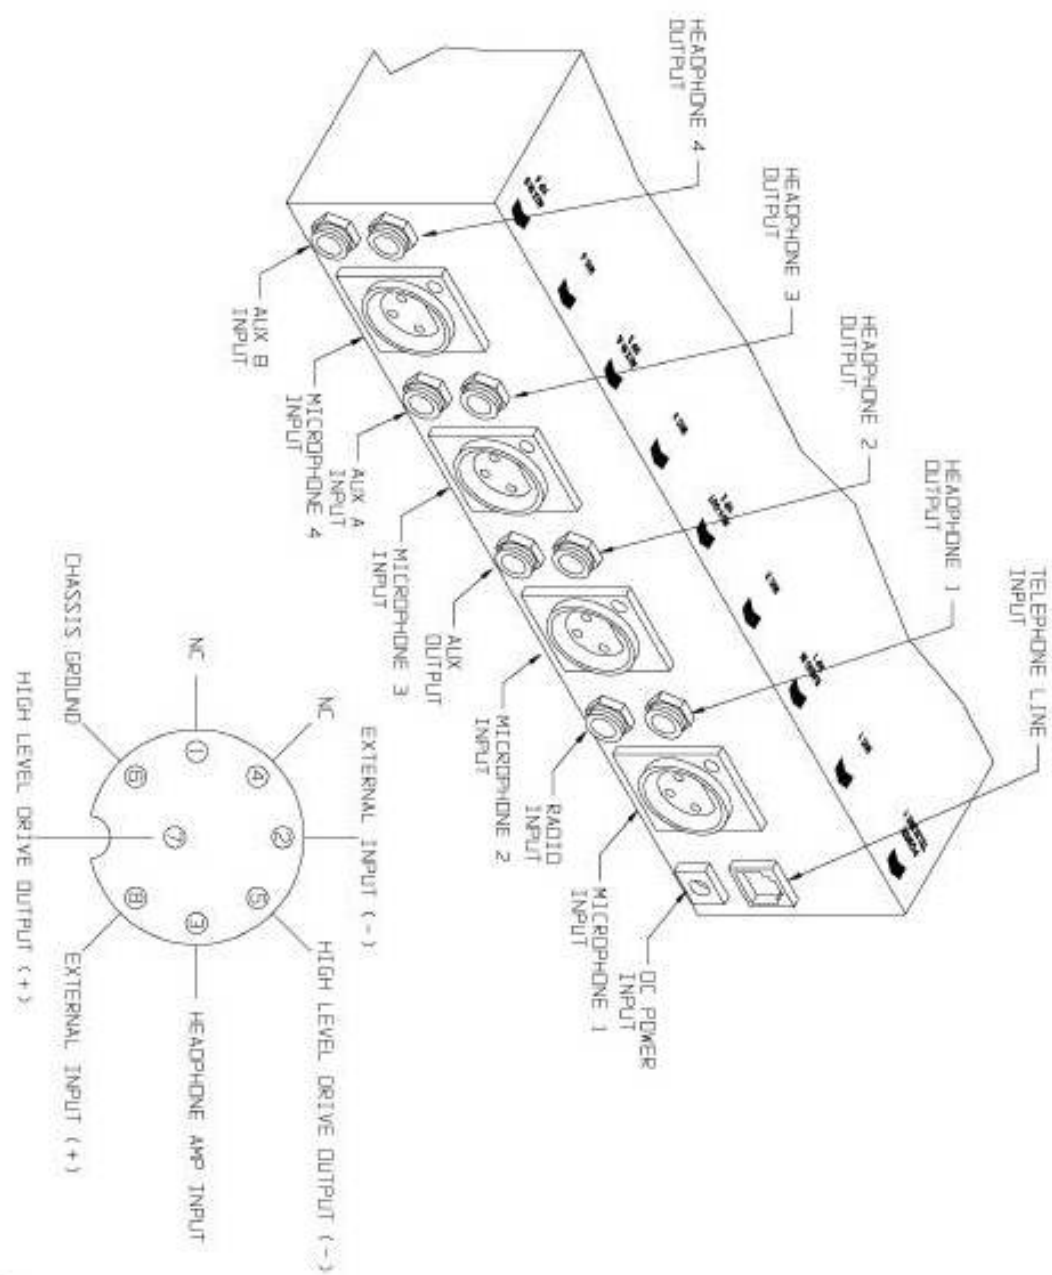



FIGURE 1. GX-500 CONTROLS AND INDICATORS (Sheet 2 of 3)

GX-500-2

DIAGRAM #2  
FRONT PANEL VIEW

COPYRIGHT © 1999 MARTI ELECTRONICS, INC



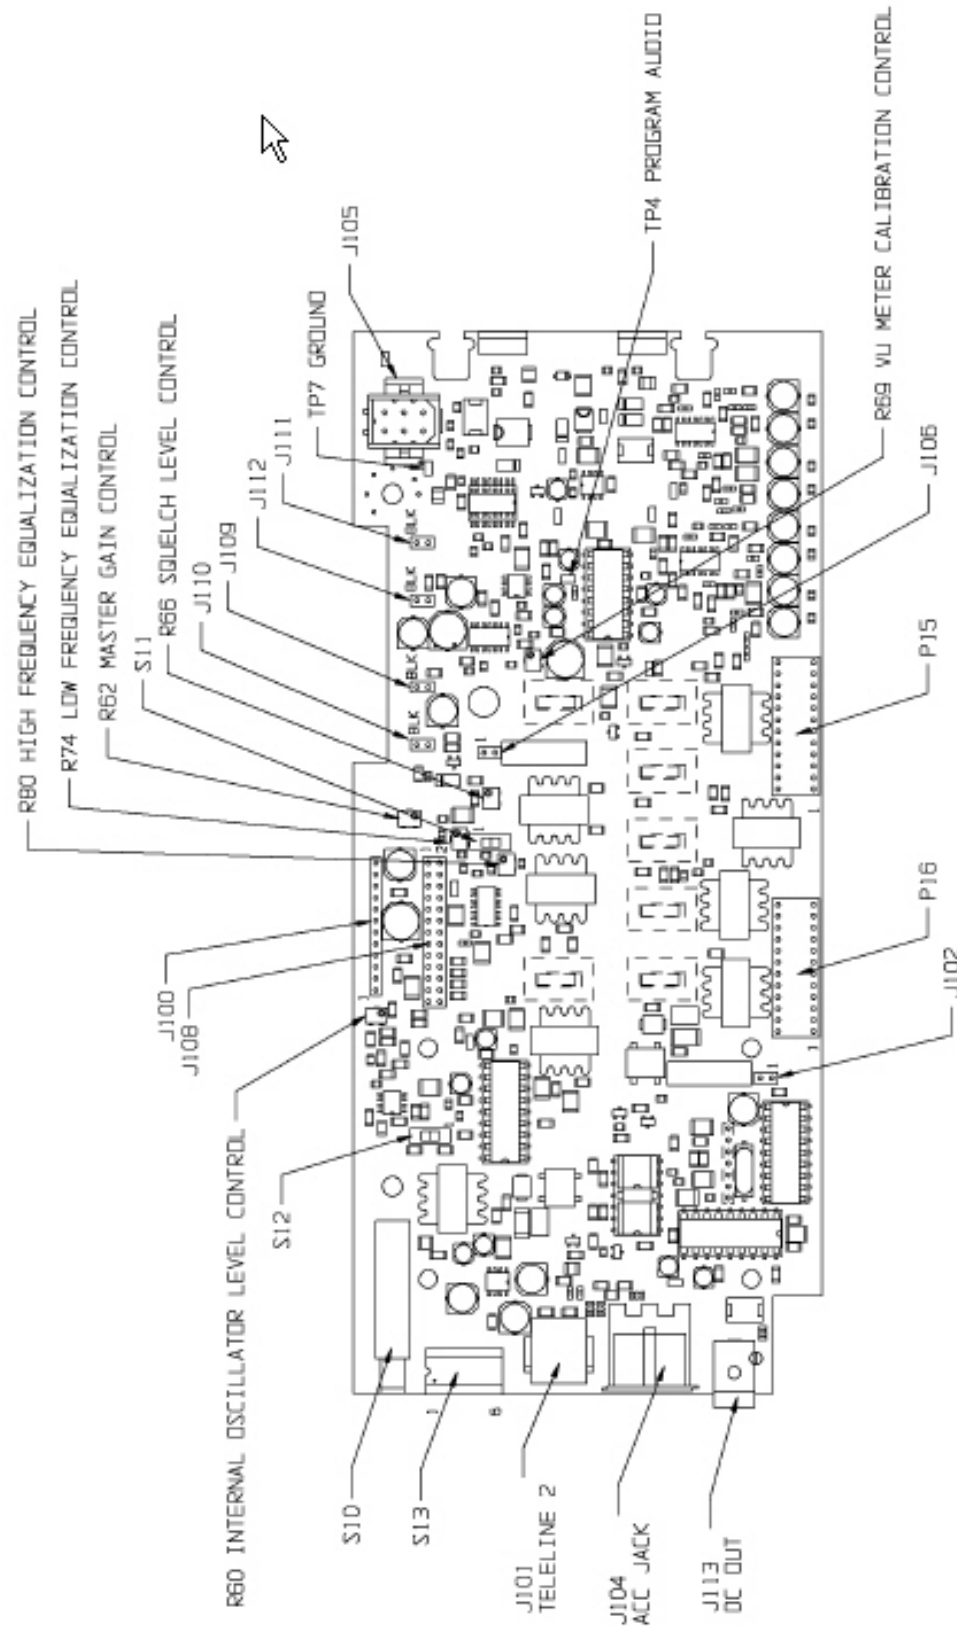

**GX-500-3**

COPYRIGHT © 1999 MARTI ELECTRONICS, INC

**FIGURE 1. GX-500 CONTROLS AND INDICATORS (Sheet 3 of 3)**

## 1.2 MICROPHONE CONNECTIONS

The GX-500 is equipped with four female microphone jacks **MIC 1** through **MIC 4**. The jacks are numbered to correspond with the volume controls located on the front panel. The microphone jacks provide active balanced 150 Ohm inputs. Refer to Figure 2 and attach a mating connector to the microphone using cable such as Belden 8441. Once the connector is attached to the cable, connect the input to the desired microphone input receptacle. Typically, the main announcer is connected to **MIC 1**. If a spotter is used for the broadcast, connect the spotter microphone to **MIC 4**.

## 1.3 HEADPHONE CONNECTIONS

Connect headphones to the 1/4 inch stereo **HP 1** through **HP 4** receptacles. The headphone volume is controlled by the **HEADPHONES** control. For best performance, use headphones with an impedance between 80 and 600 Ohms.

## 1.4 AUXILIARY INPUT CONNECTIONS

Auxiliary audio can be applied to the unit using the 1/4 inch mono **AUX IN A** and **AUX IN B** receptacles. The **AUX IN A** signal volume is increased/decreased by the **CH3/AUX A** control. The **AUX IN B** signal volume is increased/decreased by the **CH4/AUX B** control. The **AUX IN A** and **AUX IN B** jacks provide a transformer isolated 600 Ohm input for high level (+10 dB) audio equipment such as a portable cassette recorder, cart machines, or a "mass feed" distribution amplifier.

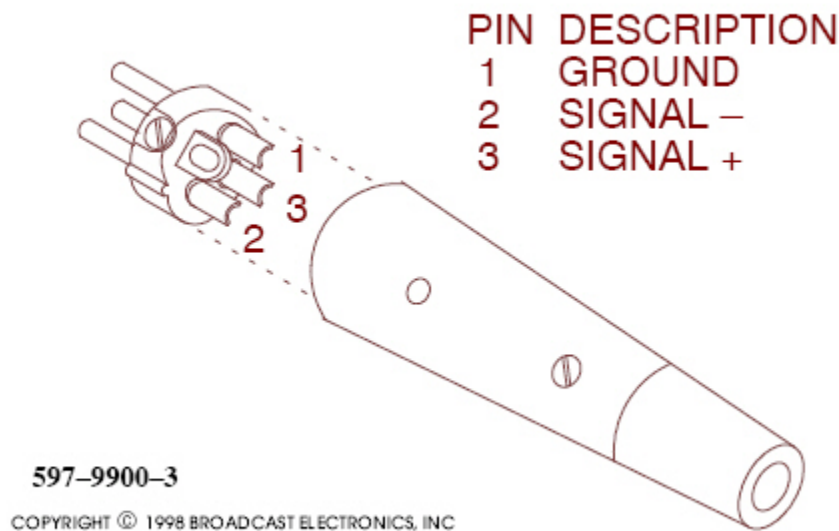


FIGURE 2. XLR PIN DESCRIPTIONS

## 1.5 AUXILIARY OUTPUT CONNECTIONS

A transformer isolated 600 ohm **AUX OUT** receptacle allows program audio to be recorded. The level is factory pre-set to feed most microphone-level inputs (cassette recorders, mixers, etc.). To change the output level, refer to GX-500 CONTROLS, INDICATORS, AND INPUTS/OUTPUTS – Mode Selector Switch – DIP Switch 3.

## 1.6 TELEPHONE LINE CONNECTIONS

The main telephone line is connected to the modular **TELELINE 1** jack. Connect the telephone cable (provided in the accessory kit) between the **TELELINE 1** receptacle and the remote broadcast room telephone jack. If the broadcast is to be sent to a second station or off-air conversations are to be performed, connect a second telephone line to the modular **TELELINE 2** receptacle.

## 1.7 ACCESSORY CONNECTIONS

An 8-pin DIN **ACC JACK** provides connections for a high level 600 Ohm transformer isolated output, an external audio input, and an external headphone input. The input is controlled by the **EXT IN/NORMAL** switch. For application information using the ACC JACK signals, refer to GX-500 CONTROLS, INDICATORS, AND INPUTS/ OUTPUTS – ACC. JACK.

## 1.8 CELLULAR TELEPHONE CONNECTIONS

The Cellular Telephone interface is no longer available or supported due to the cellular industry changing from analog to digital service.

## 1.9 OFF-AIR SIGNAL MONITORING

The station off-air signal can be monitored using a portable radio and the **RADIO IN** jack. To monitor the off-air signal connect a cable between the portable radio earphone jack and the GX-500 **RADIO IN** jack. The signal can be monitored using the headphones. Control the radio signal level using the radio volume control. Selection of normal program audio and the radio in signal is controlled by the **RADIO IN/NORMAL** switch.

## 1.10 TELEPHONE LINE MONITORING

Telephone line 1 is monitored for an incoming call by an electronic ringer. The ringer is located on the bottom chassis and is enabled when an incoming call is detected.

Telephone line 2 is monitored for an incoming call by the **LINE 2 RING** indicator. The indicator will illuminate when a call is detected on telephone line 2.

## 1.11 BATTERY SYSTEM – OVERVIEW

The GX-500 is equipped with a NIMH 7.2V battery pack and a built-in charging system. Compared to

a NICAD system, the NIMH system has the following advantages: 1) increased battery storage capability and 2) no memory effect. The battery pack will provide: 1) approximately 16 hours of operation with a 6 hour charge or 2) approximately 12 hours of operation with a 3.5 hour charge.

The battery system and the modular DC power supply can be used simultaneously. This allows the battery system to: 1) provide backup power in the event of an AC failure or modular DC power supply failure and 2) be charged during normal operation of the unit.

The status of the battery system is displayed by two front-panel indicators: 1) **BATT LOW** and 2) **BATT CHARGE**. The **BATT CHARGE** indicator presents the status of the charging system. The **BATT LOW** indicator alerts the operator of a pending low battery condition. The **BATT LOW** indicator illuminates approximately 15 to 30 minutes prior to the complete discharge of the battery pack. During an on-air broadcast, this allows the operator to maintain on-air operation by locating an AC power source prior to the complete discharge of the battery pack.

The battery pack will remain charged for approximately 30 days. After approximately 20 days, the pack will be approximately one-half discharged. It is recommended the GX-500 be charged within one to two days of the actual broadcast.

## 1.12 BATTERY SYSTEM – CHARGING

Before using the GX-500 unit for the first time, the battery pack must be charged. The pack can be charged during on-air operation or when the unit is off-the-air.

The GX-500 battery charging system is equipped with three modes of operation: 1) charge pending, 2) fast charge, and 3) top-off charge. The modes of operation are presented by the **BATT CHARGE** indicator. The charging system is extremely versatile. The battery pack can be charged during on-air operation or when the unit is not being used in a broadcast. Also, the pack can be charged at any temperature. However, if the temperature is below +5 degrees C or above +45 degrees C, the system will not go into fast charge. The system will wait until the battery pack temperature is between +5 and +45 degrees C before entering the fast charge mode. It is recommended the battery pack be charged at room temperature. The following text presents a description of the battery system modes of operation.

<i>MODE</i>	<i>BATT CHARGE INDICATOR</i>	<i>DESCRIPTION</i>
Charge Pending	Slow Flash – Flashes on for 0.125 seconds and off for 1.375 seconds.	This mode slowly increases the battery voltage prior to fast charge.
Fast Charge	Illuminates steadily.	Rapid charge of the battery pack.
Top-Off Charge	Fast Flash – Flashes on for 0.125 seconds and off for 0.125 seconds.	This mode constantly pulses current into the batteries.



## 1.13 BATTERY CHARGING PROCEDURE

The following procedure can be performed when the unit is on-the-air or when the unit is not being used in a broadcast. It is recommended the GX-500 be charged within one to two days of the actual broadcast. To charge the GX-500 battery pack, proceed as follows:

1. Connect the GX-500 power supply to a 100 to 240 volt 50/60 Hz ac power supply.
2. Connect the power supply cable to the **PWR IN** receptacle on the GX-500 rear-panel.

Depending on the condition of the battery pack, the **BATT CHARGE** indicator will illuminate steadily or flash. The following text presents the battery pack conditions.

**BATT CHARGE Indicator Flashes Slow – Charge Pending Mode** – This indicates the battery system is in the charge-pending mode. This typically occurs when the battery voltage is very low or the battery temperature is below approximately +5 degrees C. This mode will continue until the battery voltage reaches approximately 4 to 5 volts or the temperature increases above +5 degrees C. The battery charging system will slowly increase the battery pack voltage until the pack can sustain fast charge operation. This mode lasts up to 15 minutes. Once the pack reaches the voltage threshold, the charging system will automatically start the fast charge mode.

**BATT CHARGE Indicator Illuminates Steadily – Fast Charge Mode** – Indicates the battery system is in the fast charge mode. This mode lasts approximately 3.5 hours. Fast charge will continue until one of the following conditions occur: 1) 3.5 hours has elapsed, 2) a 15 hold-off time has expired (this occurs when the battery pack is already fully charged), or 3) the battery pack temperature exceeds approximately +45 degrees C. Once the fast charge mode has been completed, the charging system will automatically start the top-off charge mode.

**BATT CHARGE INDICATOR Flashes Fast – Top-Off Charge Mode** – When the fast charge mode has been completed, the BATT CHARGE Indicator will flash fast to indicate the system is in the top-off charge mode. This mode pulses small amounts of current into the battery pack to complete the battery charge process. If this condition occurs during initial power on, the battery pack is above approximately +45 degrees C. The battery system will not enter fast-charge until the pack temperature is below approximately +45 degrees C. The top-off charge mode is a continuous process. The system will remain in this mode until dc power is removed from the unit.

3. The batteries will be charged at the end of the fast-charge mode which requires approximately 3.5 hours to complete. This will operate the unit for approximately 12 hours. If the battery system is allowed to continue the top-off-charge process for approximately 1.5 to 3 hours, the unit will operate for approximately 16 hours.

Battery charge operation can be terminated at any time. To terminate charging operation, disconnect the cable from the PWR IN receptacle.

## 1.14 BATT LOW INDICATOR

The **BATT LOW** indicator alerts the operator of a pending low battery condition. The indicator illuminates approximately 15 to 30 minutes prior to the complete discharge of the battery pack. If this occurs during a broadcast, simply connect the GX-500 power supply to the **PWR** receptacle. This will allow the unit to continue on-air operation and charge the battery pack.

## 2 OPERATION

1. Ensure all microphones, headphones, cassette units, and telephone lines are connected to the unit.
2. Operate the **POWER ON/OFF** switch to **ON**.

*The **POWER LED** on the VU meter will illuminate.*

3. Pre-set and note all microphone and auxiliary levels. Adjust the levels until the VU meter **0/100%** indicator illuminates consistently on peaks and only occasionally illuminates the red LED on loud sound bursts. If the microphone levels are properly set, the **LIMITING LED** will illuminate infrequently.
4. Operate all unused microphone channels to position 0.
5. Operate the following switches to the appropriate positions.
  - A. Operate the **RADIO IN/NORMAL** switch to **NORMAL**.
  - B. Operate the **EXT IN/NORMAL** switch to **NORMAL**.
  - C. Operate the **SQ MUTE/NORMAL** switch to **NORMAL**.
  - D. Operate the **CUE/MIX** switch to **MIX**.
  - E. Operate telephone line 1 **LINE SEIZE/DISCON** switch to **DISCON**.
  - F. Operate the **TONE/PULSE** switch to **TONE**.
  - G. Operate the **LINE 2 MUTE/NORMAL** switch to **NORMAL**.
  - H. Operate the **LINE 2 LINE SEIZE/DISCON** switch to **DISCON**.
6. Battery power can be conserved by waiting for in-coming calls with the **POWER ON/OFF** switch in the OFF position. The electronic ringer is also enabled with the **POWER ON/OFF** switch in the ON position.
7. To answer an in-coming call on telephone line 1, move the **LINE SEIZE/DISCON** switch to **LINE SEIZE**. This will seize and hold the line.
8. To place a call using telephone line 1, proceed as follows:
  - A. Select either **PULSE** or **TONE** using the **PULSE/TONE** switch. All standard dial lines will accept pulse dialing; however, this is a slower mode of operation. Attempt tone mode dialing by operating the **PULSE/TONE** switch to **TONE**. If the tone mode can not be used, operate the **PULSE/TONE** switch to **PULSE**. If a long distance service requires the entry of touch-tone access codes, operate the switch from **PULSE** to **TONE** once the service is connected.
  - B. Operate the **DIAL SELECT** switch to **LINE 1** (in position).
  - C. Move the **LINE SEIZE/DISCON** switch to **LINE SEIZE**.
  - D. Adjust the **HEADPHONES** level control to detect the presence of a dial tone in the headphones.
  - E. Using the keypad, enter all the telephone number digits. In the **PULSE** mode, the dialing will continue for a few moments after the last button has been pushed.
  - F. If the number dialed is busy, move the **LINE SEIZE/ DISCON** switch to **DISCON** and then back to **LINE SEIZE** to reset the dial tone.



- G. Once contact is established with the studio, communicate with the studio using the headset microphone and earphones. To hold the line, the **LINE SEIZE/DISCON** switch must remain in **LINE SEIZE** for the duration of the broadcast.

---

**NOTE**

*WHEN THE UNIT IS SENDING PROGRAM AUDIO ON LINE 1, THE FOLLOWING PROCEDURES MUST BE PERFORMED DURING A COMMERCIAL BREAK OR ANY OTHER TIME PROGRAM AUDIO IS NOT TO BE GENERATED BY THE GX-500.*

---

9. To place a call using telephone line 2, perform the following procedure. When the unit is sending program audio on line 1, the following procedure must be performed during a commercial break or any other time program audio is not being generated by the GX-500.
- A. Select either PULSE or TONE using the PULSE/TONE switch. All standard dial lines will accept pulse dialing; however, this is a slower mode of operation. Attempt tone mode dialing by operating the PULSE/TONE switch to TONE. If the tone mode can not be used, operate the PULSE/TONE switch to PULSE. If a long distance service requires the entry of touch-tone access codes, operate the switch from PULSE to TONE once the service is connected.
  - B. Operate the **DIAL SELECT** switch to **LINE 2** (out position).
  - C. Operate the **CUE/MIX** switch to **CUE**.
  - D. Move the **LINE 2 LINE SEIZE/DISCON** switch to **LINE SEIZE**.
  - E. Adjust the **HEADPHONES** level control to detect the presence of a dial tone in the headphones.
  - F. Using the keypad, enter all the telephone number digits. In the **PULSE** mode, the dialing will continue for a few moments after the last button has been pushed.
  - G. If the number dialed is busy, move the **LINE 2 LINE SEIZE/ DISCON** switch to **DISCON** and then back to **LINE SEIZE** to reset the dial tone.
  - H. Operate the **CUE/MIX** switch to **MIX**.
  - I. The following text presents operating procedures for communicating with a caller such as the studio, sending program audio to a second station, and placing a caller on-the-air. Communication with the caller is performed using the headset microphone and earphones. The **LINE 2 LINE SEIZE/ DISCON** switch must remain in the **SEIZE** position in order to hold the line.
    - (1) To send program audio to a second station, operate the **LINE 2 NORMAL/MUTE** switch to **MUTE**. This routes program output audio to telephone line 2.
    - (2) To communicate with a caller such as the studio or to set up a call to be placed on the on-the-air, proceed as follows:
      - a. Operate the **LINE 2 NORMAL/MUTE** switch to **MUTE** to communicate to the caller.
      - b. Operate the **LINE 2 NORMAL/MUTE** switch to **NORMAL** to listen to the caller.
      - c. Adjust the caller audio level using the **CH4/AUXB** volume control. Adjust the **HEADPHONES** volume control as required to listen to the caller.
    - (3) To place a caller on the on-the-air, proceed as follows:



- a. Operate the **LINE 2 NORMAL/MUTE** switch to **MUTE** to mute the caller input audio and route program (announcer) audio to the caller.
- b. Operate the **LINE 2 NORMAL/MUTE** switch to **NORMAL** to place the caller on-the-air.
- c. Adjust the caller audio level using the **CH4/AUXB** volume control.

**NOTE**

*DO NOT LEAVE THE SQUELCH ON DURING THE BROADCAST. USE THE SQUELCH ONLY WHEN COMMUNICATING WITH THE STUDIO*

10. If desired, the automatic squelch/mute circuit can be enabled when communicating with the studio by operating the **SQ/MUTE/NORMAL** switch to **SQ/MUTE**.

When the **SQ/MUTE/NORMAL** switch is moved from **NORMAL** to **SQ/MUTE**, **MIC 1** and **MIC 4** will be muted until the announcer begins talking. In this mode, the microphones will not amplify background noise and the distant party will be heard more clearly. When the **SQ/MUTE/NORMAL** switch is in the **SQ/MUTE** position, only **MIC1** and **MIC 4** are active. The **MIC 2** and **MIC 3** inputs will be muted. Therefore, **MIC 1** and **MIC 4** should always be assigned to the main announcer if the squelch function is to be used. The muting of the **MIC 2 AND MIC 3** inputs can be overridden by operating **MIC 2** mute override DIP switch 5 to **ON** and **MIC 3** mute override DIP switch 6 to **ON**. If the mute function is to be used as a cough switch, use input **MIC 2** or **MIC 3** with the mute override switches in the **OFF** position.

11. Channel 4 is equipped with a **CUE/MIX** switch. For normal operation, operate the switch to **MIX**. To remove the channel 4 or auxiliary B input audio from the on-air audio, move the **CUE/MIX** switch to **CUE**. The audio will be present in the headphones without the on-air audio. With this functionality, channel 4 is typically used as a spotter input for routing information to the main announcer(s) in a closed circuit. Other possible uses include: 1) cueing tapes, 2) monitoring a network feed, or 3) using telephone line 2 to feed information from the studio to the announcers. To prevent leakage of cue audio into the program audio, avoid feeding excessively high levels to channel 4 when using the cueing feature.
12. The following tips should be practiced to avoid picking up interference from other electrical equipment:
  - A. Keep all unused microphone input controls at position 0.
  - B. Keep the unit as far away as possible from all transformer operated devices to avoid hum pick-up.
  - C. Avoid operation near a portable VHF/UHF transmitter or similar radio transmitting equipment. If such a situation can't be avoided, place the unit at least 15 feet away from the transmitting antenna. In situations where RF interference is present, connect the chassis of the unit to earth ground (cold water pipe, grounded outlet box, etc.) If the interference persists, install an external telephone line RF filter available from an electronic store such as Radio Shack.





## 2.1 OPERATION WITH A CELLULAR TELEPHONE

The Cellular Telephone interface is no longer available or supported due to the cellular industry changing from analog to digital service.

## 2.2 EXTERNAL AUDIO INPUT OPERATION

The GX-500 is equipped with an external audio input. This input is designed for the connection of external audio processing equipment such as a low frequency extender. If external audio input operation is desired, proceed as follows:

1. Refer to Figure 1 and connect the audio equipment to **ACC. JACK** as follows:
  - A. Connect the processing equipment input to: 1) Audio Output (-) pin 5 and 2) Audio Output (+) pin 7.
  - B. Connect the processing equipment output to: 1) External Audio Input (-) pin 2 and 2) External Audio Input (+) pin 8.
2. Monitor the external audio input or telephone line audio as follows:
  - A. To monitor the external input audio, operate the **EXT IN/NORMAL** switch to **EXT IN**.
  - B. If the telephone line is to be used for communication with the studio during breaks, operate the **EXT IN/NORMAL** switch to **NORMAL**. This allows the telephone line audio to be monitored.

## 2.3 EXTERNAL HEADPHONE INPUT OPERATION

The GX-500 is equipped with an unbalanced external headphone input. This input is designed for the connection of an unbalanced headphone signal. If external headphone input operation is desired, proceed as follows:

1. Ensure the headphone audio signal is connected to external head- phone input pin 3 on the **ACC. JACK**.
2. Operate mode select DIP switch 1 to OFF.
3. Apply the headphone signal to the unit. The volume must be adjusted by a control external to the unit.
4. When finished, operate mode select DIP switch 1 to ON.

## 3 GX-500 CONTROLS, INDICATORS, AND INPUT/OUTPUTS

ITEM	DESCRIPTION
Line 1 <b>LINE SEIZE/DISCON</b> Switch	Used to seize telephone line 1. The <b>LINE SEIZE</b> position seizes telephone line 1. The <b>DISCON</b> position disconnects the GX-500 from the telephone line.
<b>TONE/PULSE</b> Switch	Configures the dialing circuitry to the tone or pulse mode of operation. The <b>TONE</b> position configures the circuitry to the tone mode of operation. The <b>PULSE</b> position configures the circuitry to the pulse mode of operation.
<b>EXT IN/NORMAL</b> Switch	Configures the GX-500 for the use of external processing

	equipment such as a low frequency extender. The equipment is connected to the unit using the <b>ACC.JACK</b> . Operate the switch to the <b>NORMAL</b> position unless external audio processing is used. If processing is used, operate the switch to <b>EXT IN</b> . To monitor the telephone line audio, operate the switch to the <b>NORMAL</b> position.
<b>RADIO IN/NORMAL</b> Switch	Used to monitor an off-air signal from a portable radio. The <b>RADIO IN</b> position routes the off-air signal to the GX-500 headphone system. The <b>NORMAL</b> position routes normal program audio to the headphone system.
<b>SQ/MUTE/NORMAL</b> Switch	Enables the squelch/mute system. The <b>SQ/MUTE</b> position enables the squelch/mute circuitry. When squelch/mute is enabled, only channels 1 and 4 are active. Channels 2 and 3 are muted unless the channel 2 and 3 mute over-ride switches are enabled (refer to <b>MODE SELECT SWITCH</b> in the following text). The <b>NORMAL</b> position disables the squelch/mute circuitry.
<b>LINE 2 LINE SEIZE/DISCON</b> Switch	Used to seize telephone line 2. The <b>LINE SEIZE</b> position seizes telephone line 2. The <b>DISCON</b> position disconnects the GX-500 from telephone line 2.
<b>LINE 2 MUTE/NORMAL</b> Switch	The <b>LINE 2 MUTE/NORMAL</b> switch allows the announcer to mute audio from telephone line 2. The <b>MUTE</b> position mutes the telephone audio until the audio is ready to be place on-the-air. As a result, the announcer must move the switch to <b>MUTE</b> whenever the caller is to listen to the announcer or other program audio. If line 2 is being used to send audio to a second studio or station, ensure the switch is in the <b>MUTE</b> position. The <b>NORMAL</b> position allows telephone line 2 audio to be mixed using the <b>CH4/AUX B</b> volume control. The <b>NORMAL</b> position also mutes the program audio feed to the caller.
<b>LINE 2 RING</b> Indicator	Illuminates to indicate a call is present on telephone line 2.
<b>DIAL SELECT LINE 1/LINE 2</b>	Configures the keypad for line 1 or line 2 operation. The <b>LINE 1</b> (in) position configures the keypad for line 1 operation. The <b>LINE 2</b> (out) position configures the keypad for line 2 operation. The switch will latch either in or out when depressed. If <b>LINE 2</b> is used, return the switch to <b>LINE 1</b> when finished.
<b>TELELINE 2 Jack</b>	An RJ-11 jack for the connection of telephone line 2.
<b>ACC. JACK</b>	An 8-Pin DIN connector used to interface external audio equipment to the unit. The following text presents the pin descriptions: <b>High Level Drive (-) Output Pin 5 and High Level Drive (+) Output Pin 7</b> – A 600 Ohm, transformer isolated, high level (0 dBm) output used to connect the input of external processing equipment such as a low frequency extender or an ISDN/switch Net 56 interface to the unit. <b>External Input (-) Pin 2 and External Input (+) Pin 8</b> – Used to connect the output of external processing equipment such as a low frequency extender to the GX-500. <b>Headphone Amplifier Input Pin 3</b> – Used to connect an external unbalanced input to the headphone amplifier. <b>Chassis Ground Pin 6</b> – Chassis ground.



DC OUT Jack	Provides approximately 7.6 to 5.5 volts DC.
POWER ON/OFF Switch	Controls the application of DC power to the unit.
HEADPHONES Level Control	Adjusts the headphone level.
CH1 Level Control	Adjusts the channel 1 audio level.
CH2 Level Control	Adjusts the channel 2 audio level.
CH3/AUX A Level Control	Adjusts the channel 3/Auxiliary A input audio level.
CH4/AUX B Level Control	Adjusts the channel 4/Auxiliary B input audio level.
CH4 CUE/MIX Switch	Used to route channel 4/auxiliary B input audio to the program mix bus or the cue bus. The <b>CUE</b> position routes studio to the cue bus. The <b>MIX</b> position routes audio to the program mix bus.
MIC1, MIC2, MIC3, MIC4 Microphone Jacks	Four balanced XLR jacks for the connection of microphones. If the squelch/mute system is to be used, connect the announcer microphone to <b>MIC1</b> or <b>MIC4</b> . Typically, the main announcer is connected to <b>MIC1</b> and a spotter is connected to <b>MIC4</b> .
HP1, HP2, HP3, HP4 Headphone Jacks	¼ inch stereo jacks for the connection of headphones.
AUX IN A, AUX IN B Audio Jacks	¼ inch mono jacks for the connection of high level (+10 dB) audio signals.
AUX OUT Jack	A ¼ inch mono jack for the connection of a powered speaker, other monitor equipment, or the input to a cassette recorder. Outputs a low (-52 dB) or a high (-18 dB) level audio signal.
RADIO IN Jack	A ¼ inch stereo jack for the connection of a portable radio headphone output.
PWR Jack	Used to connect DC power to the unit.
TELELINE 1 Jack	An RJ-11 jack for the connection of telephone line 1.
BATT LOW Indicator	Illuminates to indicate a pending low battery condition. The indicator illuminates approximately 15 to 30 minutes prior to the complete discharge of the battery pack.
BATT CHARGE Indicator	Displays the status of the internal battery charging system. <b>Flash Slow (flashes on for 0.125 seconds and off for 1.375 seconds) – Charge-Pending Mode.</b> This mode slowly increases the battery voltage prior to fast charge. <b>Illuminates Steadily – Fast Charge Mode.</b> Rapid charge of the battery pack. <b>Flash Fast (flashes on for 0.125 seconds and off for 0.125 seconds) – Top-Off Charge Mode.</b> This mode constantly pulses current into the batteries.
LINE 1 Indicator	Illuminates to indicate telephone line 1 is seized.
LINE 2 Indicator	Illuminates to indicate telephone line 2 is seized.
VU Meter	A 10 segment LED bargraph display presenting audio levels. The <b>POWER</b> LED illuminates when the <b>POWER ON/OFF</b> switch is operated to <b>ON</b> . The <b>LIMITING</b> LED illuminates <b>when</b> the squelch/mute circuitry is enabled.
Mode Selector Switch	The mode selector switch consists of six miniature DIP switches. The switches are factory pre-set in the normal positions. The switch functions are as follows: <b>DIP Switch 1 – Headphone Amplifier Input</b> – Normal is up (ON). The up (ON) position routes normal internal audio to the headphone system. The down (OFF) position disconnects the normal program audio to the headphone

	<p>system. This is used when external headphone audio is applied to the unit. The external headphone input is located at pin 3 on the <b>ACC.JACK</b>.</p> <p><b>DIP Switch 2 – Oscillator</b> – Normal is down (OFF). The up (ON) position enables the internal 1 kHz test tone oscillator. This signal is used to inject a steady tone into the program audio for proper level setting at the studio. The tone will register at a level of approximately 100% on the <b>VU</b> meter. The down (OFF) position disables the internal test tone oscillator.</p> <p><b>DIP Switch 3 – AUX Out Level</b> – Normal is down (OFF). The up (ON) position configures the <b>AUX OUT</b> jack for a -18 dBm level. The down (OFF) position configures the <b>AUX OUT</b> jack for a -52 dBm level.</p> <p><b>DIP Switch 5 &amp; 6 – Squelch/Mute Enable</b> – Normal is down (OFF). Switch 5 is for channel 2. Switch 6 is for channel 3. The down (OFF) position configures channels 2 and 3 for automatic muting when the <b>SQ/MUTE/NORMAL</b> switch is operated to <b>SQ/MUTE</b>. The up (ON) position defeats the automatic muting on channels 2 and 3.</p>
Equalization Switch S11	<p><b>Switch S11</b> – Switch S11 controls the GX-500 built-in equalization circuit. Access to the switch is accomplished by removing the bottom panel. When S11 is operated to position 1-2, the equalization circuit is enabled. Once enabled, the high and low frequencies can be boosted or cut by adjusting potentiometers R80 for high frequencies and R74 for low frequencies. These potentiometers are factory pre-set for a flat response at the high and low ends. If adjustment is required, it is recommended the adjustment be performed using an audio volt-meter or oscilloscope connected to high level drive output (-) pin 5 and high level drive output (+) pin 7 on the <b>ACC JACK</b>. As test tones are applied to one of the microphone inputs, slowly adjust the potentiometers for the desired frequency response using a level of 100% VU. When S11 is operated to position 2-3, the equalization circuit is disabled. The normal position is 2-3.</p>
Aux Out Send/Send-Receive Switch S12	<p><b>Switch S12</b> - Switch S12 configures the <b>AUX OUT</b> receptacle to output send only or send and receive audio. Access to the switch is accomplished by removing the bottom panel. When S12 is operated to position 1-2, only the send audio (program audio) is routed to the <b>AUX OUT</b> receptacle. When S12 is operated to position 2-3, both the send audio and receive (telephone line) audio are routed to the <b>AUX OUT</b> receptacle. This is typically used for recording conversations from the telephone line. When using either position, ensure mode selector switch 3 is in the desired position (microphone level or line level). The normal position is 1-2.</p>
Power Supply Unit	<p>The unit is supplied with a universal switching power supply rated for 100V to 240V AC 50/60 Hz. If the power adapter is lost or damaged, a replacement adapter can be ordered by calling MARTI Electronics.</p>



Fuse	The GX-500 is equipped with several auto-resettable fuses. If a fuse trips, wait approximately 10 minutes to allow the fuse to reset. Once the waiting period has expired attempt operation.
------	--

## 4 ADJUSTMENTS

The GX-500 is equipped with five adjustment controls. The following text presents the procedures to adjust the controls.

### 4.1 MASTER GAIN CONTROL R62 AND VU METER CALIBRATION CONTROL R69

Master gain control R62 and VU meter calibration control R69 are adjusted at the factory for 0 VU with a -50 dBm input signal. With these adjustments, the GX-500 will output a level of approximately -9 dBm at the telephone line. To adjust the unit for a different output level, perform the following procedure. The procedure presented in the following text adjusts the unit for a telephone line output level of approximately -9 dBm.

1. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
2. Remove the GX-500 bottom panel.
3. Connect a signal generator to the **MIC 1** microphone receptacle.
4. Adjust the signal generator for a 1 kHz -50 dBm output with a 150 Ohm output impedance.
5. Refer to Figure 1 and connect an oscilloscope between TP-4 (signal) and TP-7 (ground).
6. Re-connect the GX-500 power supply cable and operate the GX-500 **POWER ON/OFF** switch to **ON**.
7. Apply the audio to the GX-500.
8. Refer to Figure 1 and adjust master gain control R62 for a 1.4 volt peak-to-peak waveform on the oscilloscope. This will produce a telephone line output level of approximately -9 dBm. A higher output level can be obtained by adjusting the control for a waveform greater than 1.4 volts. However, the higher output level may cause clipping at the telephone line.
9. Refer to Figure 1 and adjust VU meter calibration control R69 until the VU meter 0/100% indicator illuminates.
10. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
11. Remove the test equipment and replace the bottom panel.

## 4.2 HIGH FREQUENCY EQUALIZATION CONTROL R80 AND LOW FREQUENCY EQUALIZATION CONTROL R74

High frequency equalization control R80 and low frequency equalization control R74 adjust the equalization circuit. The equalization can be adjusted to meet the desired frequency response. To adjust the controls, proceed as follows:

1. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
2. Remove the GX-500 bottom panel.
3. Connect a signal generator to the MIC 1 microphone receptacle.
4. Refer to Figure 1 and operate switch S11 to position 1-2.
5. Re-connect the GX-500 power supply cable and operate the GX-500 **POWER ON/OFF** switch to **ON**.
6. Adjust the controls as follows:
  - A. Adjust the signal generator for a -50 dBm output with a 150 Ohm output impedance at the desired frequency.
  - B. Refer to Figure 1 and adjust high frequency equalization control R80 and low frequency equalization control R74 for the desired audio response.
7. Repeat the procedure as required to obtain the desired response.
8. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
9. Remove the test equipment and replace the bottom panel.

## 4.3 INTERNAL OSCILLATOR LEVEL CONTROL R60

Internal oscillator level control R60 adjusts the level of the internal oscillator. The oscillator is adjusted at the factory for a **100%/0** VU meter indication. To adjust the control, proceed as follows:

1. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
2. Remove the GX-500 bottom panel.
3. Refer to Figure 1 and operate switch S13-2 to **ON**.
4. Re-connect the GX-500 power supply cable and operate the GX-500 **POWER ON/OFF** switch to **ON**.
5. Refer to Figure 1 and adjust internal oscillator level control R60 until the VU meter **100%/0** LED illuminates.
6. Refer to Figure 1 and operate switch S13-2 to **OFF**.
7. Disconnect the GX-500 power supply cable and operate the **POWER ON/OFF** switch to **OFF**.
8. Replace the bottom panel.



## 5 BILLS OF MATERIAL

This bill of material uses an indented structure to show relationships of parts into sub assemblies.

Example; all BOM LEVEL 2 parts are contained in the BOM LEVEL 1 part immediately above it.

BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
0	GX-500-220	GX-500 Remote Mixer 220V		
..1	510-066	Equipment Label, 2.5 x .937" Brady #10C8600890"	1	
..1	550-287	Plug,8 Pin Din Male MCM 27-675 Switchcraft #15GM8M	1	
..1	566-029-001	INSTRUCTION MANUAL, GX500, W/BINDER	1	
....2	566-029	INSTRUCTION MANUAL, GX 500 TELEPHONE REMOTE MIXER	1	
....2	598-0013	BINDER,MARTI,1 IN,BLUE,W CD POCKET	1	
..1	586-184	Cable Assembly,Modular Phone Cable 6 feet GCE30-9569	1	
..1	600-048	Box, RSC 275 C/F K Stitch AR/RPT2/15	1	
..1	705-GX500	GX-500 REMOTE MIXER	1	
....2	700-248-12A	GX-500 Final Assmebly	1	
.....3	040-018	Battery,EAC#EA5AA621D2,7.2v, 6 Cell,1100 MAH,6 Pin MR Conn.	1	
.....3	175-001	Neon Bulb Resistor,120 Vac 2 Pack 272-712	1	
.....3	323-0005	LED BARGRAPH DISPLAY WITH PCB/DRIVER,10 SEG,G/Y/R	1	
.....3	415-454	LED,Green mv5454a T-1 3/4 dIFUSED QT	3	
.....3	423-6003	#6 LOCK INT TOOTH	4	
.....3	423-6015	#6 FLAT .320 X .145 X	4	
.....3	471-5375	CHASSIS,GX-500,NEW	1	
.....3	500-058	Flat Washer, #6 SAE	2	
.....3	500-164	Flat Washer, Micro Plastics #FW250-062 nylon	5	
.....3	500-180	Screw, 4-40 x 1/4 phillips pan head M/S Black Zinc"	2	
.....3	500-183	Screw, 6-32 x 1/4 phillips pan head Black Zinc"	18	
.....3	500-188	Screw, 4-40 x 3/8 phillips,flat head,black oxide"	8	
.....3	500-192	Screw, 6-32 x 3/8 phillips pan head black zinc M/S"	4	
.....3	500-199	Keps nut 4 x 40 zinc 4CNKEOZ	2	
.....3	500-239	Nut,For Volume Control Shaft Mouser#481-0017	5	
.....3	510-251	Foam Tape 1/2 x 1/4 3M #4004	0.006	
.....3	510-253	Foam tape 1/2 x 1/16 3M #4016	0.002	
.....3	510-256	Fish paper1520 15mil 25x42 .015 x 25 x 42 .75lbs per sheet	0.005	

BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
.....3	510-286	Feet, Rubber w/Adhesive Back Richco #RICRBS-1 Black	4	
.....3	510-323	FIGURE DIAL, 26mm	5	
.....3	510-336	Knob,15mm,Collet,Matte Blk w/o Line,6mm Shaft Selco#K150-006	5	
.....3	510-337	Knob,15mm Cap Cover,Black Plain,Selco#C150-Black5	1	
.....3	510-338	Knob,15mm,Cap Cover,Blue,Plain Selco #C150-Blue9	1	
.....3	510-339	Knob,15mm,Cap Cover,Red,Plain Selco #C150-Red7	1	
.....3	510-340	Knob,15mm,Cap Cover,Yellow,Plain Selco #C150-Yellow10	1	
.....3	510-341	Knob,15mm,Cap Cover,Gray,Plain Selco #C150-Gray6	1	
.....3	510-342	Lens for LED,Clear,Panel Mount,1-3/4 Mouser #CMC321CTP	4	
.....3	510-343	Retainer Ring for LED Lens Mouser#593-RNG234	4	
.....3	550-155-2	Connector Shell XLR Receptacle DH- NF-BAG-O	4	
.....3	550-205	Connector pins, Molex 16-02-0086	4	
.....3	550-214	Connector, breakaway header Molex 22- 28-4361	0.33	
.....3	550-321	Connector,2-Pin Non-Polarized Molex 50-57-9002	2	
.....3	560-023	Ringer,Electronic BR-3 BLACK	1	
.....3	586-151A	ASSY,RIBBON CABLE,26 CONDUCTOR,6 LONG"	1	
.....3	586-198	Flex Cable,VU to Main PCB	1	
.....3	586-199	CABLE ASSEMBLY,LED 1-3/4 W/CONNECTOR	4	
.....3	700-0119	TAPE,KAPTON 1/4	0.17	
.....3	700-248-11	Bracket,Battery Hold Down for GX-500 W/ PEM NUTS	1	
.....3	700-248-13	Bottom Chassis for GX-500	1	
.....3	DB32041	LED Yellow, 521-9248-T1-3/4 QT MV5353	1	
....2	800-371A	GX-500 Main Circuit Board Assembly	1	
....2	800-372A1	GX-500 Input-Output Board Assembly	1	
.....3	360-043	Filter,EMI 10,000PF 100V 3Pos Murata DSS306-55FZ103N100	27	FL1,FL2,FL3,FL4, FL5,FL6,FL7,FL8, FL9,FL10,FL11, FL12,FL13,FL14, FL15,FL16,FL17, FL18,FL19,FL20,F L21,FL22,FL23, FL24,FL25,FL26, FL27
.....3	417-2600	CONN,HEADER,26PIN	2	J15,J16
.....3	423-0029-1	WASHER, FLAT FIBER, (MODIFIED GX500)	4	





BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
.....3	530-070	Jack, 1/4 Headphone Switchcraft N112BPC (note)"	8	J4,J6,J7,J8,J9,J10, J11,J12
.....3	550-155-1	Connector, XLR Receptacle Insert Nuetrik#3FD-V-I-O	4	J1,J2,J3,J5
.....3	550-320	Header, 10 Position, Bottom Mount, Samtec #BSW-110-04-G-S	1	P17
.....3	800-372B	PC Board, GX-500 Breakaway	0.5	PCB
....2	800-372A2	GX-500 DC/Tele Connection Board Assembly	1	
.....3	330-026	Ferrite Pair, Panasonic P9817BK or Murata #BL02RN2R1M2B	2	Z1,Z2
.....3	550-267	Conn, Header 13 Pin Single Row Right Angle Molex 22-28-9132	1	J17
.....3	550-298	Jack, Coaxial DC Power/2.1mm 16PJ031	1	J14
.....3	550-305	JACK, MODULAR/GRAY PC	1	J13
.....3	800-372B	PC Board, GX-500 Breakaway	0.1	PCB
....2	800-372A3	GX-500 Front Panel Board Assembly	1	
.....3	101-103T	POT, VOLUME CONTROL 10K OHM AUDIO TAPER W/2 NUTS *NOTE*	5	R43,R45,R47,R49, R126
.....3	417-2600	CONN, HEADER, 26PIN	1	P108
.....3	530-079	Switch, Slide 4PDT Alco MSS-4200G Straight Tyco 7-1437576-0	2	S5,S9
.....3	800-372B	PC Board, GX-500 Breakaway	0.4	PCB
..1	800-384A	Power Supply for GX-500 220V w/ connector	1	
....2	418-9996	Connector, DC, RT Angle, 2.5mm, Mouser 171-3216	1	
....2	800-384	Power Supply, 220V for GX-500	1	
..1	TFX19-0206	GX Series Plastic Protective Case #50025 PQ3 7/8 W/FOAM	1	

BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
0	GX-500	GX-500 REMOTE MIXER		
..1	040-015A	Charger w/Cable for Talkport & GX500	1	
....2	040-015	Power Supply,Lead Acid Powersonic/Xenotro PSC12800A/HPX10-5	1	
....2	512-001	Lug, Hoffman FVL2216-S3BR2 or Votrex CBS-ZV-1806	2	
....2	586-182	Cable Assembly,DC/2.1mm/72 Mouser Stock#172-4101"	1	
..1	510-066	Equipment Label, 2.5 x .937" Brady #10C8600890"	1	
..1	550-287	Plug,8 Pin Din Male MCM 27-675 Switchcraft #15GM8M	1	
..1	566-029-001	INSTRUCTION MANUAL, GX500, W/BINDER	1	
....2	566-029	INSTRUCTION MANUAL, GX 500 TELEPHONE REMOTE MIXER	1	
....2	598-0013	BINDER,MARTI,1 IN,BLUE,W CD POCKET	1	
..1	586-184	Cable Assembly,Modular Phone Cable 6 feet GCE30-9569	1	
..1	600-048	Box, RSC 275 C/F K Stitch AR/RPT2/15	1	
..1	705-GX500	GX-500 REMOTE MIXER	1	
....2	700-248-12A	GX-500 Final Assmebly	1	
.....3	040-018	Battery,EAC#EA5AA621D2,7.2v, 6 Cell,1100 MAH,6 Pin MR Conn.	1	
.....3	175-001	Neon Bulb Resistor,120 Vac 2 Pack 272- 712	1	
.....3	323-0005	LED BARGRAPH DISPLAY WITH PCB/DRIVER,10 SEG,G/Y/R	1	
.....3	415-454	LED,Green mv5454a T-1 3/4 dIFUSED QT	3	
.....3	423-6003	#6 LOCK INT TOOTH	4	
.....3	423-6015	#6 FLAT .320 X .145 X	4	
.....3	471-5375	CHASSIS,GX-500,NEW	1	
.....3	500-058	Flat Washer, #6 SAE	2	
.....3	500-164	Flat Washer, Micro Plastics #FW250- 062 nylon	5	
.....3	500-180	Screw, 4-40 x 1/4 phillips pan head M/S Black Zinc"	2	
.....3	500-183	Screw, 6-32 x 1/4 phillips pan head Black Zinc"	18	
.....3	500-188	Screw, 4-40 x 3/8 phillips,flat head,black oxide"	8	
.....3	500-192	Screw, 6-32 x 3/8 phillips pan head black zinc M/S"	4	
.....3	500-199	Keps nut 4 x 40 zinc 4CNKEOZ	2	
.....3	500-239	Nut,For Volume Control Shaft Mouser#481-0017	5	
.....3	510-251	Foam Tape 1/2 x 1/4 3M #4004	0.006	
.....3	510-253	Foam tape 1/2 x 1/16 3M #4016	0.002	
.....3	510-256	Fish paper1520 15mil 25x42 .015 x 25 x	0.005	



BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
.....3	510-286	42 .75lbs per sheet Feet, Rubber w/Adhesive Back Richco #RICRBS-1 Black	4	
.....3	510-323	FIGURE DIAL, 26mm	5	
.....3	510-336	Knob,15mm,Collet,Matte Blk w/o Line,6mm Shaft Selco#K150-006	5	
.....3	510-337	Knob,15mm Cap Cover,Black Plain,Selco#C150-Black5	1	
.....3	510-338	Knob,15mm,Cap Cover,Blue,Plain Selco #C150-Blue9	1	
.....3	510-339	Knob,15mm,Cap Cover,Red,Plain Selco #C150-Red7	1	
.....3	510-340	Knob,15mm,Cap Cover,Yellow,Plain Selco #C150-Yellow10	1	
.....3	510-341	Knob,15mm,Cap Cover,Gray,Plain Selco #C150-Gray6	1	
.....3	510-342	Lens for LED,Clear,Panel Mount,1-3/4 Mouser #CMC321CTP	4	
.....3	510-343	Retainer Ring for LED Lens Mouser#593-RNG234	4	
.....3	550-155-2	Connector Shell XLR Receptacle DH- NF-BAG-O	4	
.....3	550-205	Connector pins, Molex 16-02-0086	4	
.....3	550-214	Connector, breakaway header Molex 22- 28-4361	0.33	
.....3	550-321	Connector,2-Pin Non-Polarized Molex 50-57-9002	2	
.....3	560-023	Ringer,Electronic BR-3 BLACK	1	
.....3	586-151A	ASSY,RIBBON CABLE,26 CONDUCTOR,6 LONG"	1	
.....3	586-198	Flex Cable,VU to Main PCB	1	
.....3	586-199	CABLE ASSEMBLY,LED 1-3/4 W/CONNECTOR	4	
.....3	700-0119	TAPE,KAPTON 1/4	0.17	
.....3	700-248-11	Bracket,Battery Hold Down for GX-500 W/ PEM NUTS	1	
.....3	700-248-13	Bottom Chassis for GX-500	1	
.....3	DB32041	LED Yellow, 521-9248-T1-3/4 QT MV5353	1	
....2	800-371A	GX-500 Main Circuit Board Assembly	1	
....2	800-372A1	GX-500 Input-Output Board Assembly	1	
.....3	360-043	Filter,EMI 10,000PF 100V 3Pos Murata DSS306-55FZ103N100	27	FL1,FL2,FL3,FL4, FL5,FL6,FL7,FL8, FL9,FL10,FL11, FL12,FL13,FL14, FL15,FL16,FL17, FL18,FL19,FL20, FL21,FL22,FL23, FL24,FL25,FL26, FL27
.....3	417-2600	CONN,HEADER,26PIN	2	J15,J16
.....3	423-0029-1	WASHER, FLAT FIBER, (MODIFIED GX500)	4	


BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
.....3	530-070	Jack,1/4 Headphone Switchcraft N112BPC (note)"	8	J4,J6,J7,J8,J9,J10 ,J11,J12
.....3	550-155-1	Connector, XLR Receptacle Insert Nuetrik#3FD-V-I-O	4	J1,J2,J3,J5
.....3	550-320	Header,10 Position,Bottom Mount,Samtec #BSW-110-04-G-S	1	P17
.....3	800-372B	PC Board,GX-500 Breakaway	0.5	PCB
....2	800-372A2	GX-500 DC/Tele Connection Board Assembly	1	
.....3	330-026	Ferrite Pair,Panasonic P9817BK or Murata #BL02RN2R1M2B	2	Z1,Z2
.....3	550-267	Conn,Header 13 Pin Single Row Right Angle Molex 22-28-9132	1	J17
.....3	550-298	Jack,Coaxial DC Power/2.1mm 16PJ031	1	J14
.....3	550-305	JACK, MODULAR/GRAY PC	1	J13
.....3	800-372B	PC Board,GX-500 Breakaway	0.1	PCB
....2	800-372A3	GX-500 Front Panel Board Assembly	1	
.....3	101-103T	POT,VOLUME CONTROL 10K OHM AUDIO TAPER W/2 NUTS *NOTE*	5	R43,R45,R47,R49 ,R126
.....3	417-2600	CONN,HEADER,26PIN	1	P108
.....3	530-079	Switch,Slide 4PDT Alco MSS-4200G Straight Tyco 7-1437576-0	2	S5,S9
.....3	800-372B	PC Board,GX-500 Breakaway	0.4	PCB
..1	TFX19-0206	GX Series Plastic Protective Case #50025 PQ3 7/8 W/FOAM	1	




BOM LEVEL	PART NO.	DESCRIPTION	QTY	REF. DES.
--------------	----------	-------------	-----	-----------

## 6 SCHEMATICS



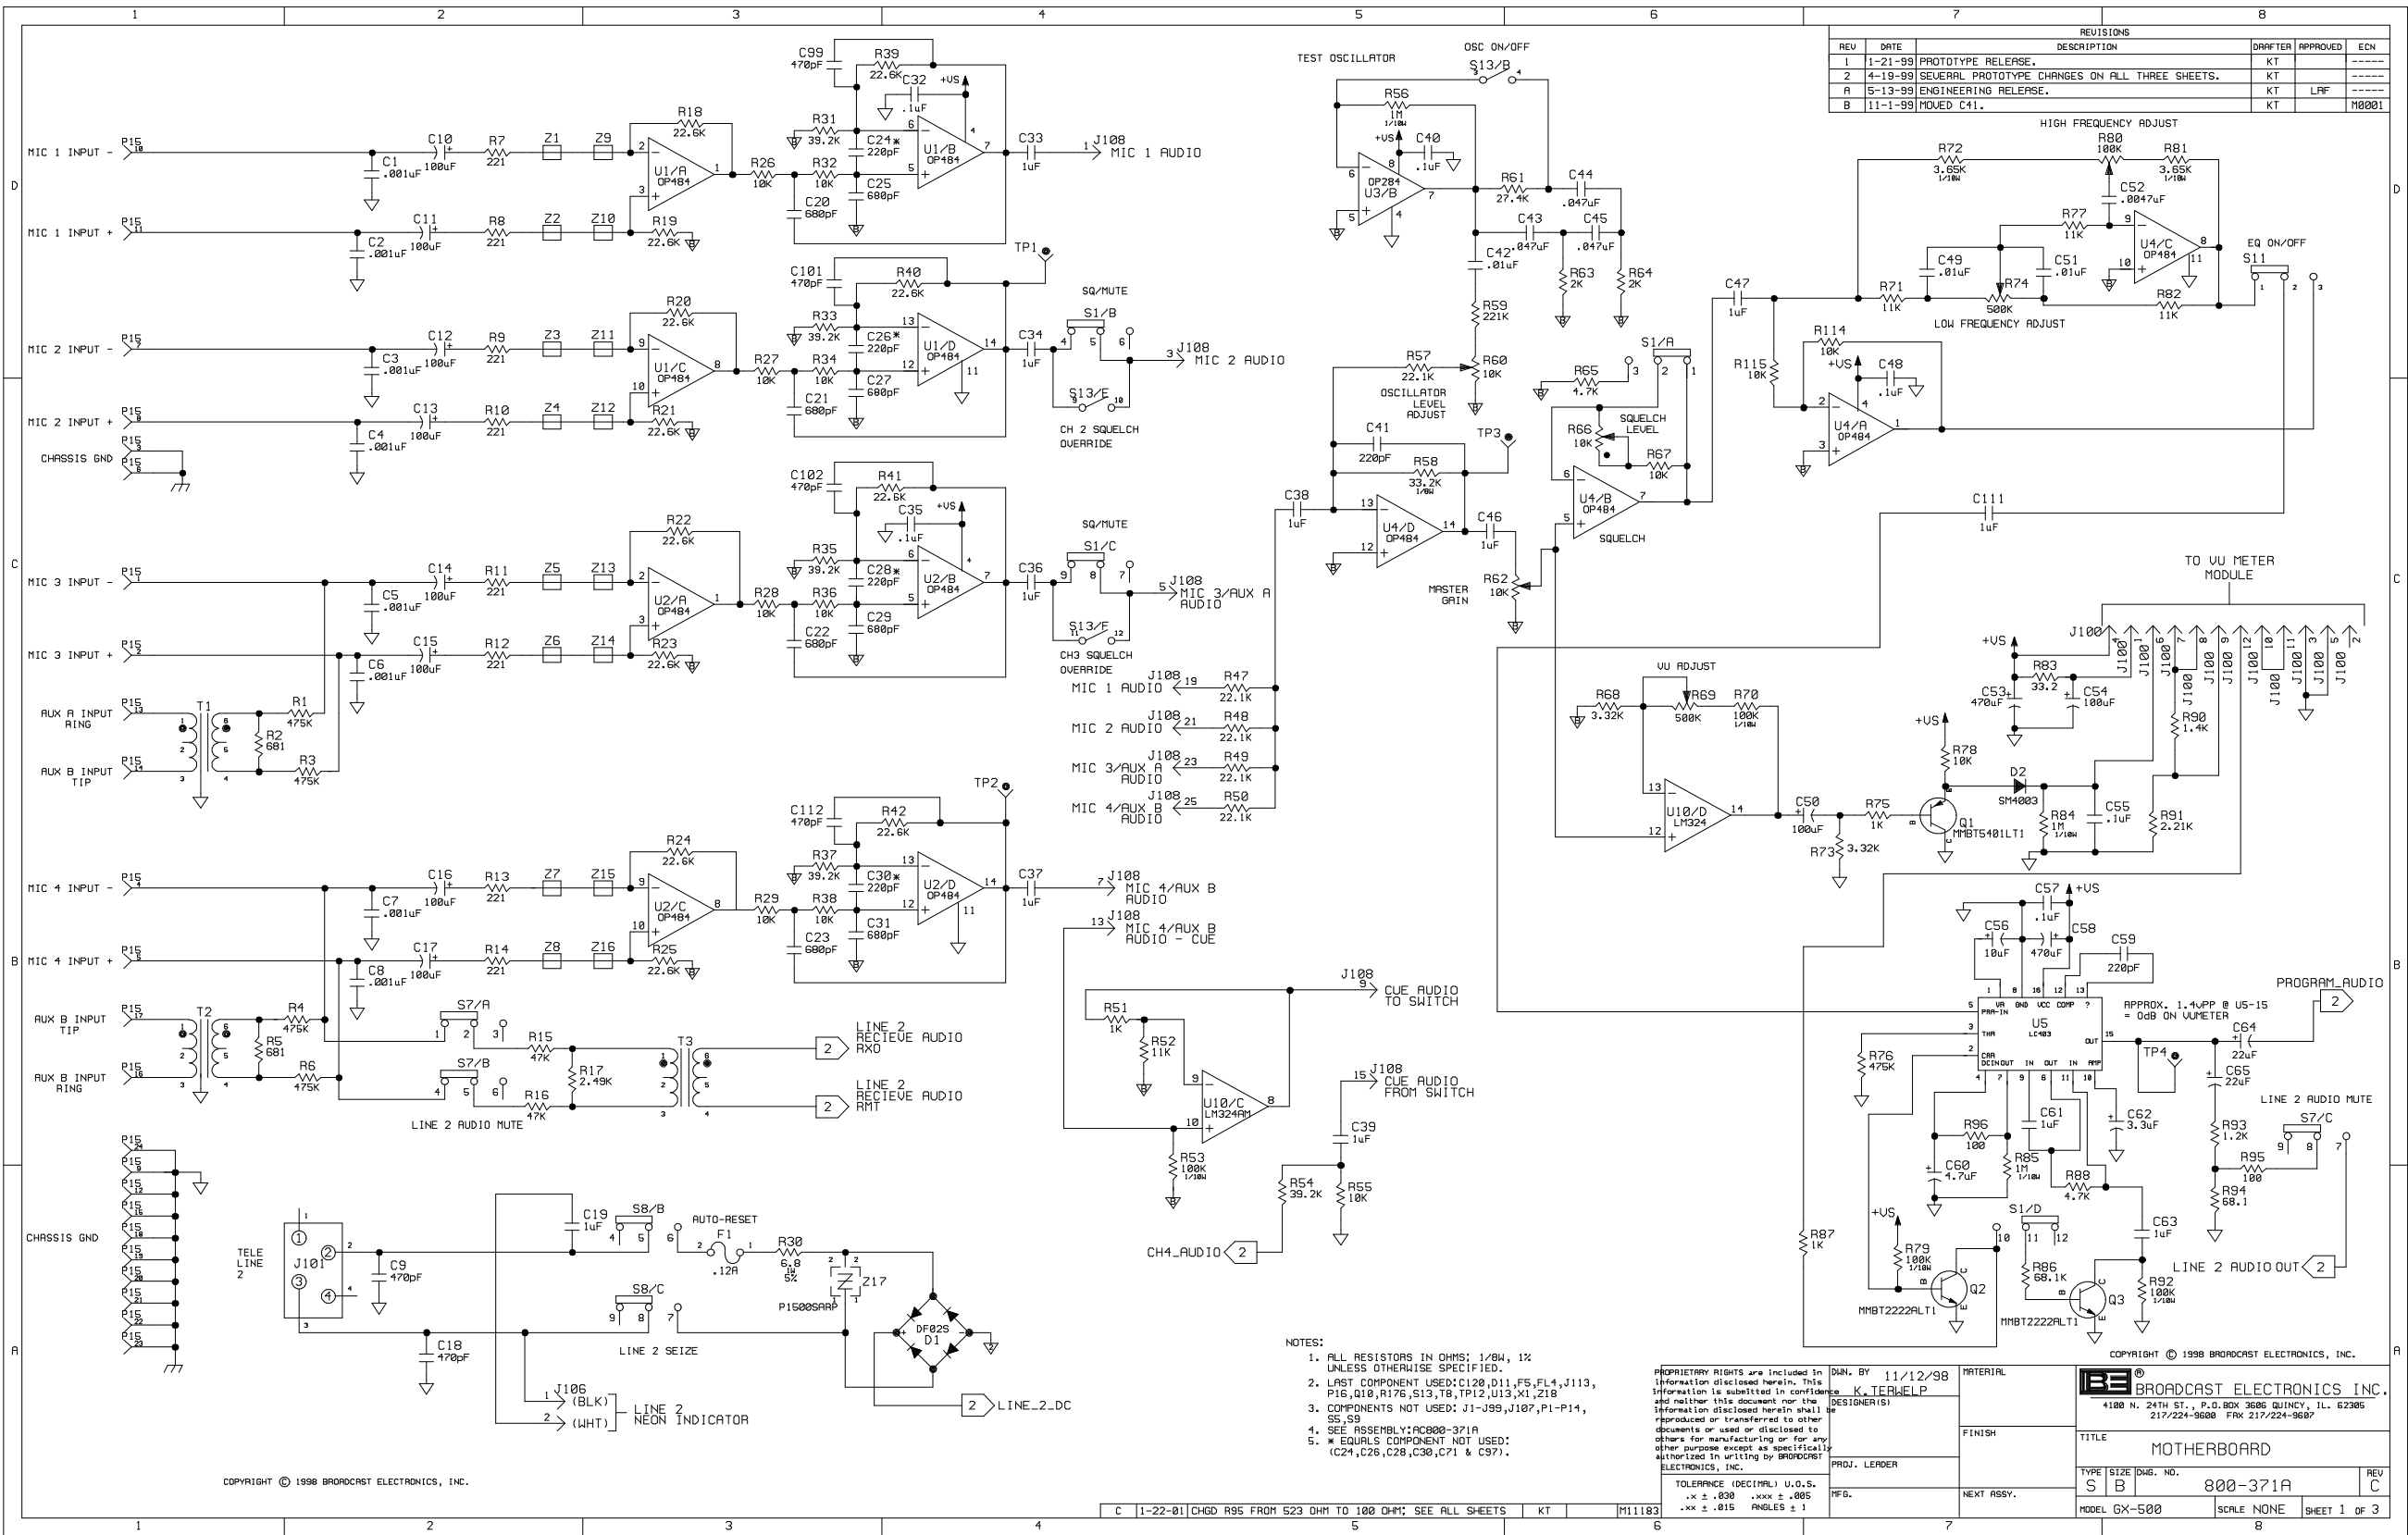

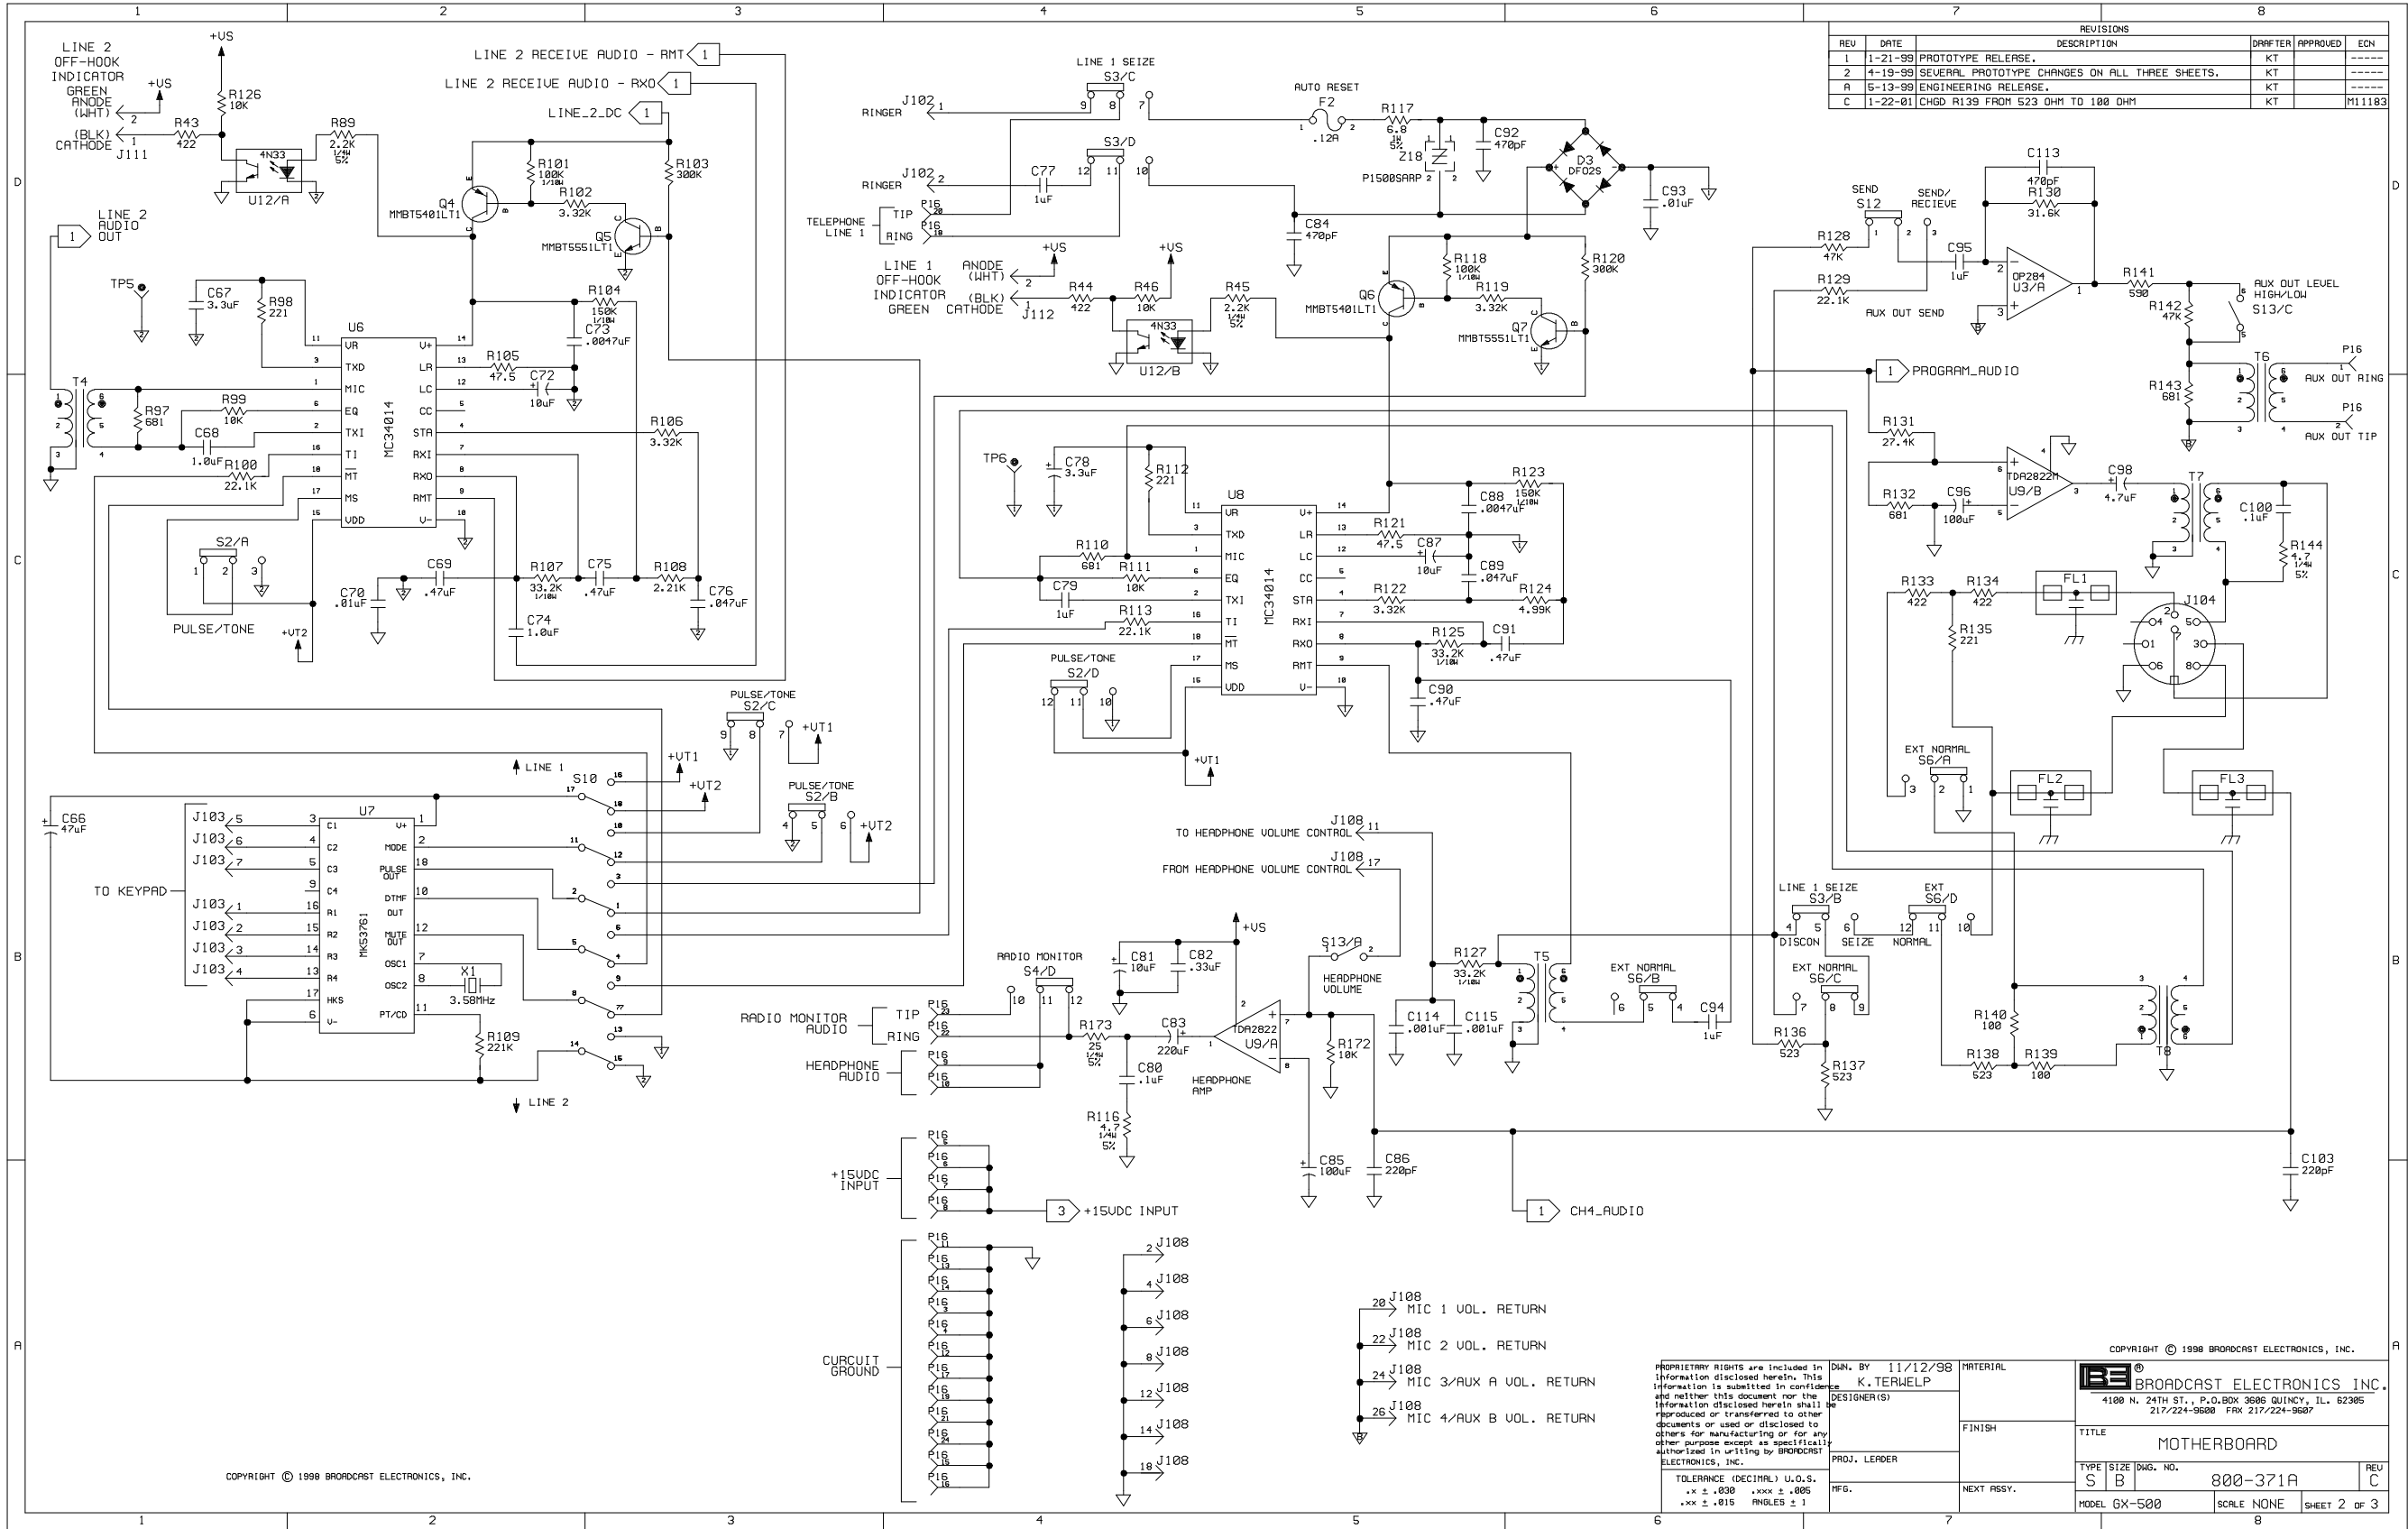

REVISIONS					
REV	DATE	DESCRIPTION	DRAWN	APPROVED	ECN
1	1-21-99	PROTOTYPE RELEASE.	KT		-----
2	4-19-99	SEVERAL PROTOTYPE CHANGES ON ALL THREE SHEETS.	KT		-----
A	5-13-99	ENGINEERING RELEASE.	KT		-----
C	1-22-01	CHGD R139 FROM 523 OHM TO 100 OHM	KT		M11183

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE (DECIMAL) U.O.S.  
..x ± .030 ..xxx ± .005  
..x ± .015 ANGLES ± 1

DWN. BY 11/12/98  
K. TERWELP  
DESIGNER(S)  
PROJ. LEADER  
MFG.

MATERIAL  
FINISH  
NEXT ASSY.


COPYRIGHT © 1998 BROADCAST ELECTRONICS, INC.  
4100 N. 24TH ST., P.O. BOX 3686 QUINCY, IL. 62305  
217/224-9600 FAX 217/224-9607

**BROADCAST ELECTRONICS INC.**

TITLE  
MOTHERBOARD



TYPE SIZE DWG. NO.  
S B 800-371A

MODEL GX-500 SCALE NONE SHEET 2 OF 3

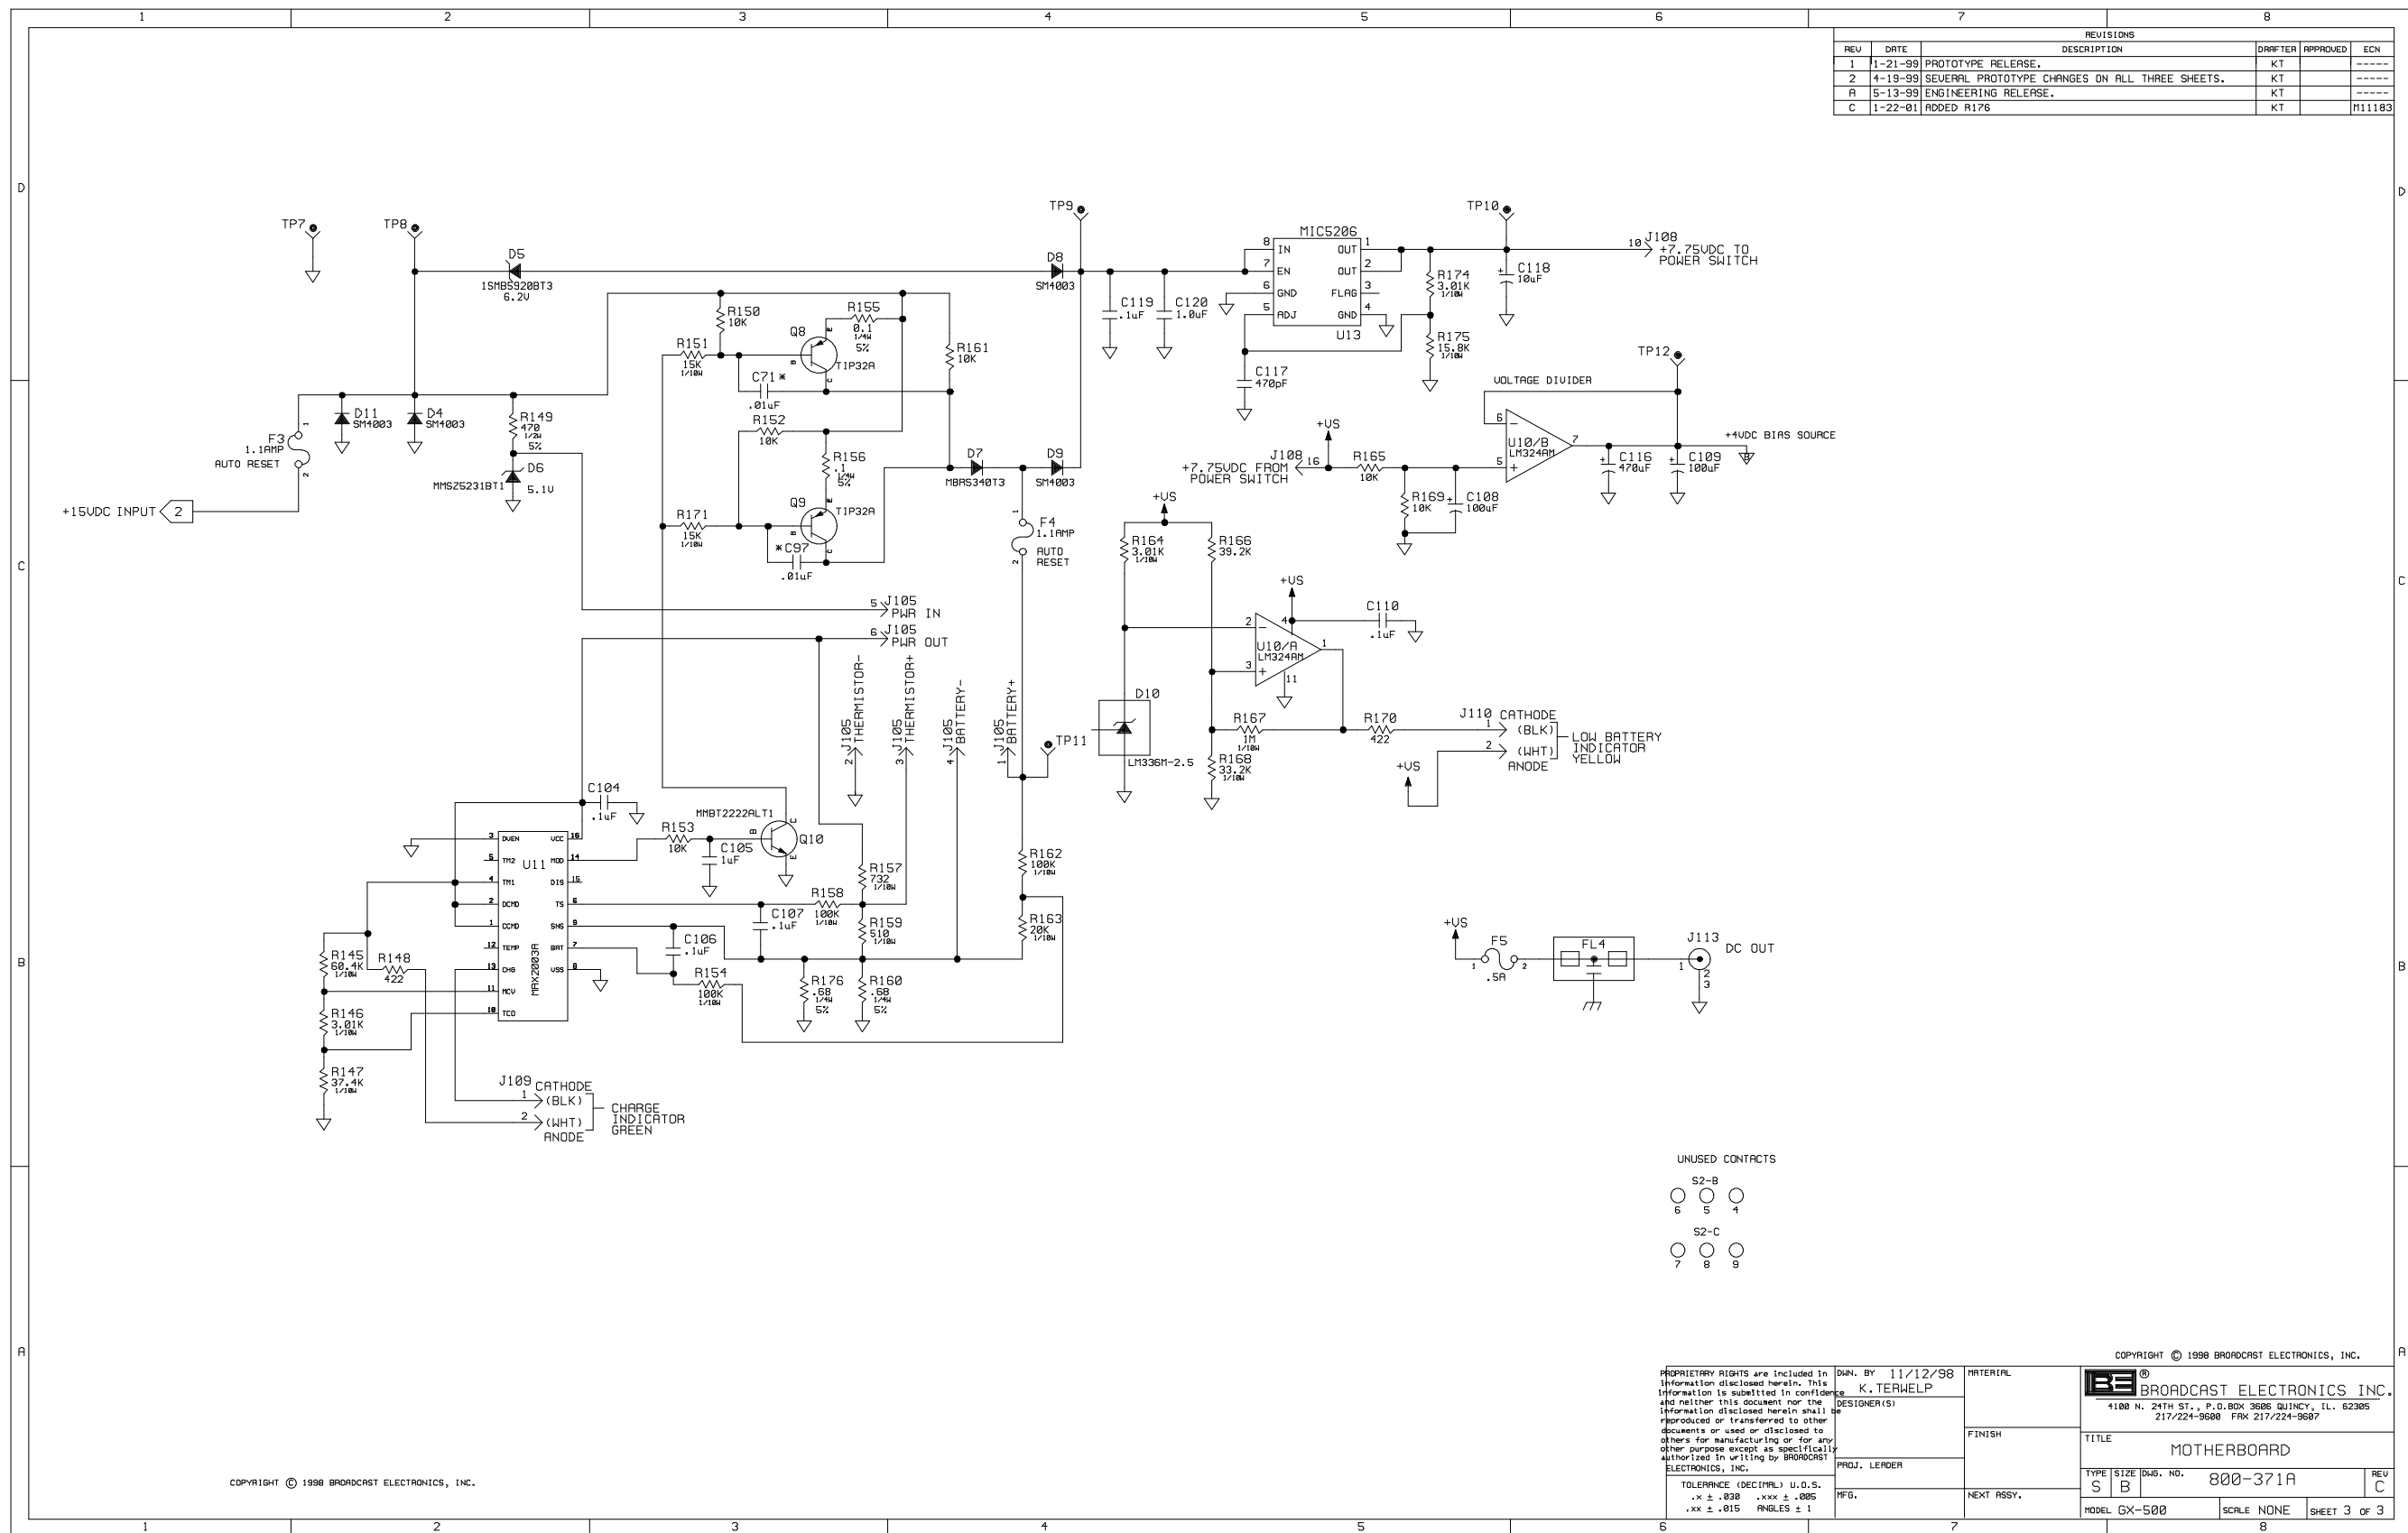



REVISIONS					
REV	DATE	DESCRIPTION	DRAFTER	APPROVED	ECN
1	1-4-99	PROTOTYPE RELEASE.	KT		-----
2	4-27-99	PROTOTYPE CHANGES ACROSS BOARD.	KT		-----
A	5-13-99	ENGINEERING RELEASE.	KT	LRF	-----
B	11-4-99	FIXED COMPONENT FOOTPRINTS.	KT	LRF	M0001
C	4-12-01	CHGD R95 & R139 TO 100 OHM; ADDED R176	KT	LRF	M11183
D	5-15-01	MOVED FL2,C65,C64,C57,TP4,C58,C81,C98	KT	LRF	10455
E	5-19-05	FIXED SILKSCREEN NUMBER	KT	LRF	11290
F	10-11-07	ADD RED CAP (343-6331)	JTB		11578

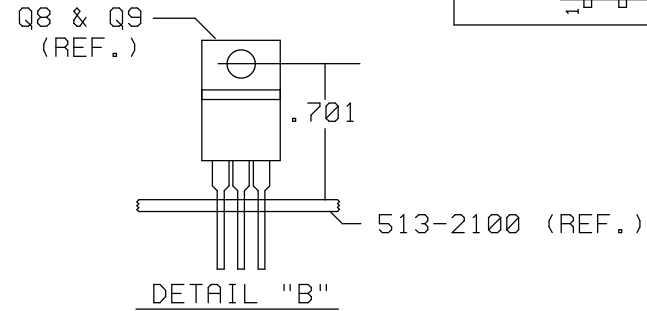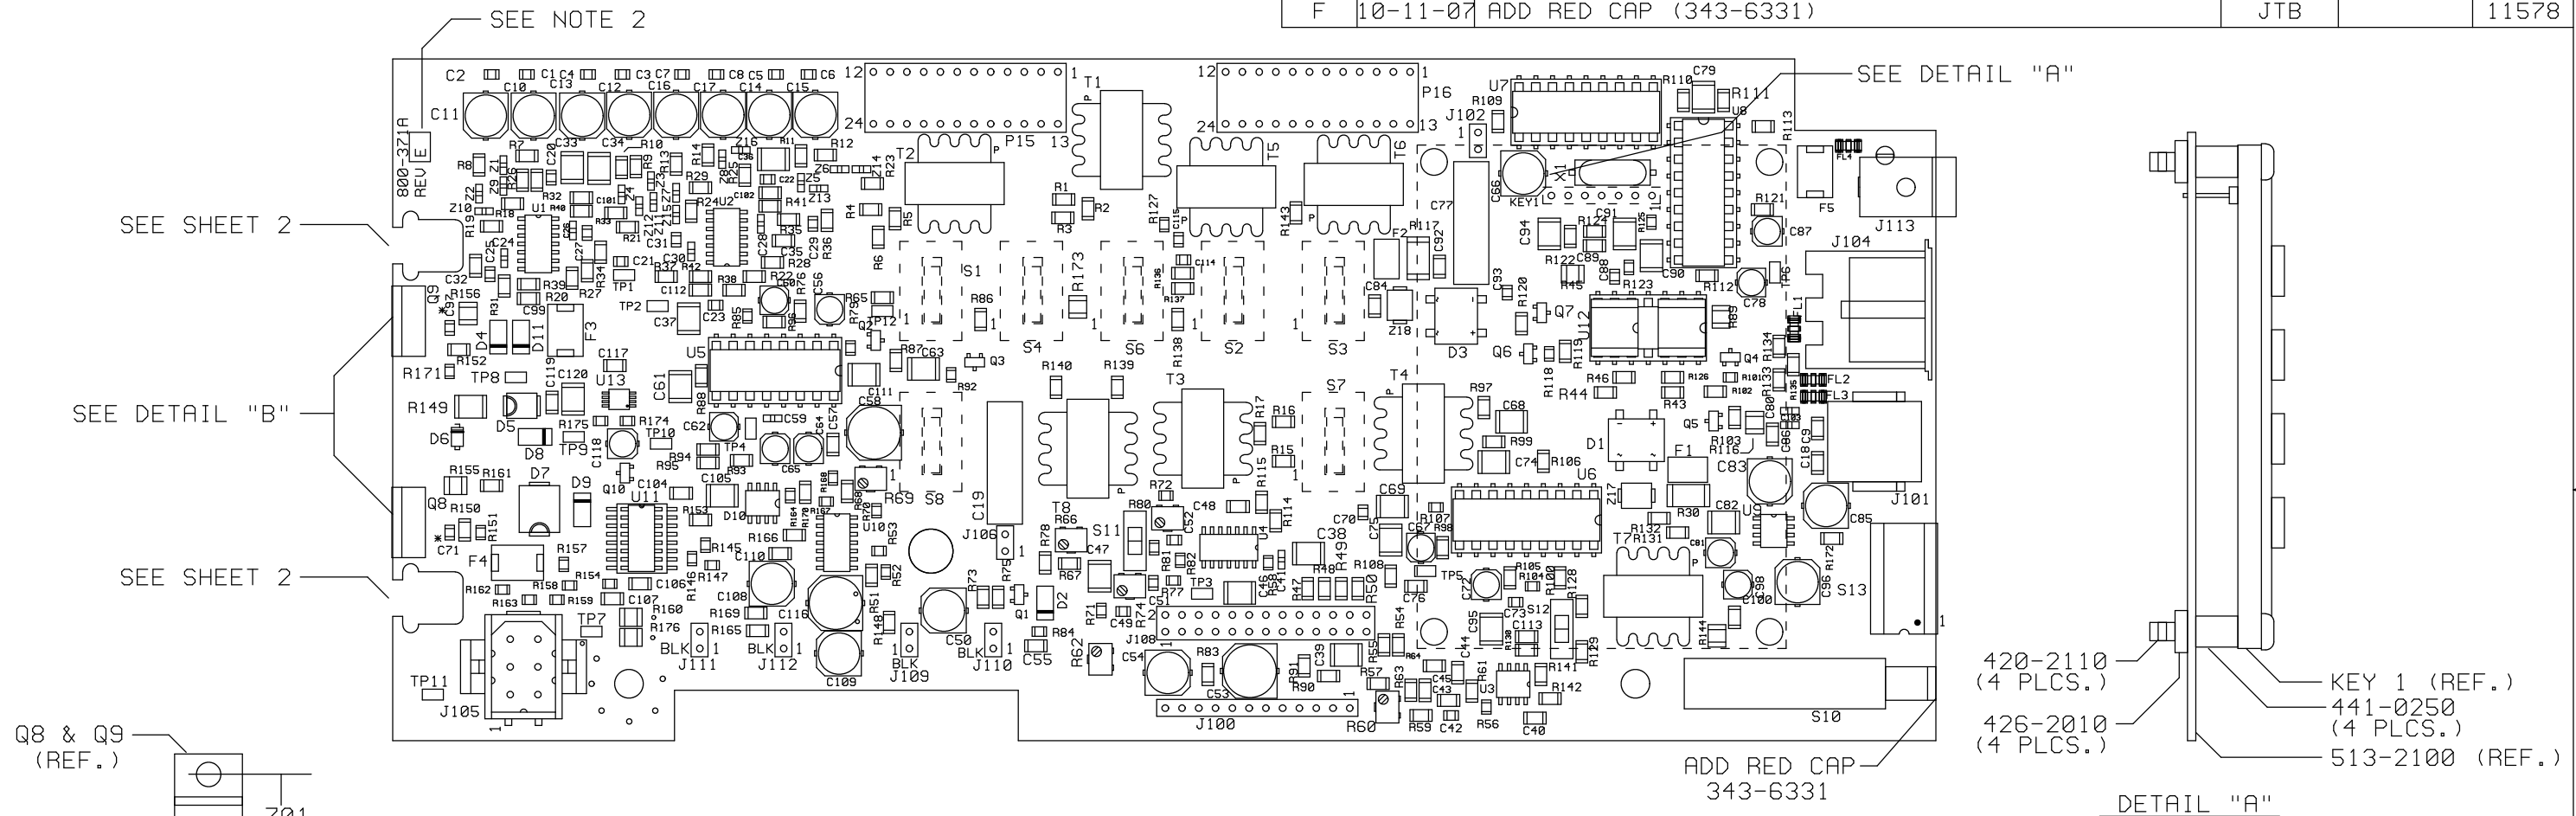

COPYRIGHT © 1999 BROADCAST ELECTRONICS, INC.

<b>BE</b> ® BROADCAST ELECTRONICS INC. 4100 N. 24TH ST. P.O.BOX 3606 QUINCY,IL. 62305 217/224-9600 FAX 217/224-9607			
TITLE MOTHER BOARD			
TYPE A	SIZE B	DWG No. 800-371A	REV F
MODEL GX-500		SCALE 1/1	SHEET 1 OF 2

NOTES:

- 1) SEE SCHEMATIC SB800-371A
- 2) IN THE BLANK WHITE BOX WRITE THE REV. LEVEL THAT APPEARS IN THE REV. BLOCK OF THE CURRENT ASSEMBLY DRAWING.
- 3) \* INDICATES PARTS NOT USED: C71 & C97
- 4) S1-S4,S6-S8 & KEY 1 ARE MOUNTED ON THE SOLDER SIDE OF PCB.

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE (DECIMAL) U.O.S.  
.X ± .030 .XXX ± .005  
.XX ± .015 ANGLES + 1°

DWN. BY 1-4-99  
K. TERWELP

DESIGNER(S)

PROJ. LEADER

MFG.


MATERIAL

FINISH

NEXT ASSY.

REVISIONS					
REV	DATE	DESCRIPTION	DRAFTER	APPROVED	ECN
A	5-13-99	ENGINEERING RELEASE.	MSE	LRF	----
B	11-2-99	ADDED SHOULDER AND SPLIT WASHERS, CHGD NUTS.	KT	LRF	M0001

DETAIL TO MOUNT  
TRANSISTORS TO HEATSINK

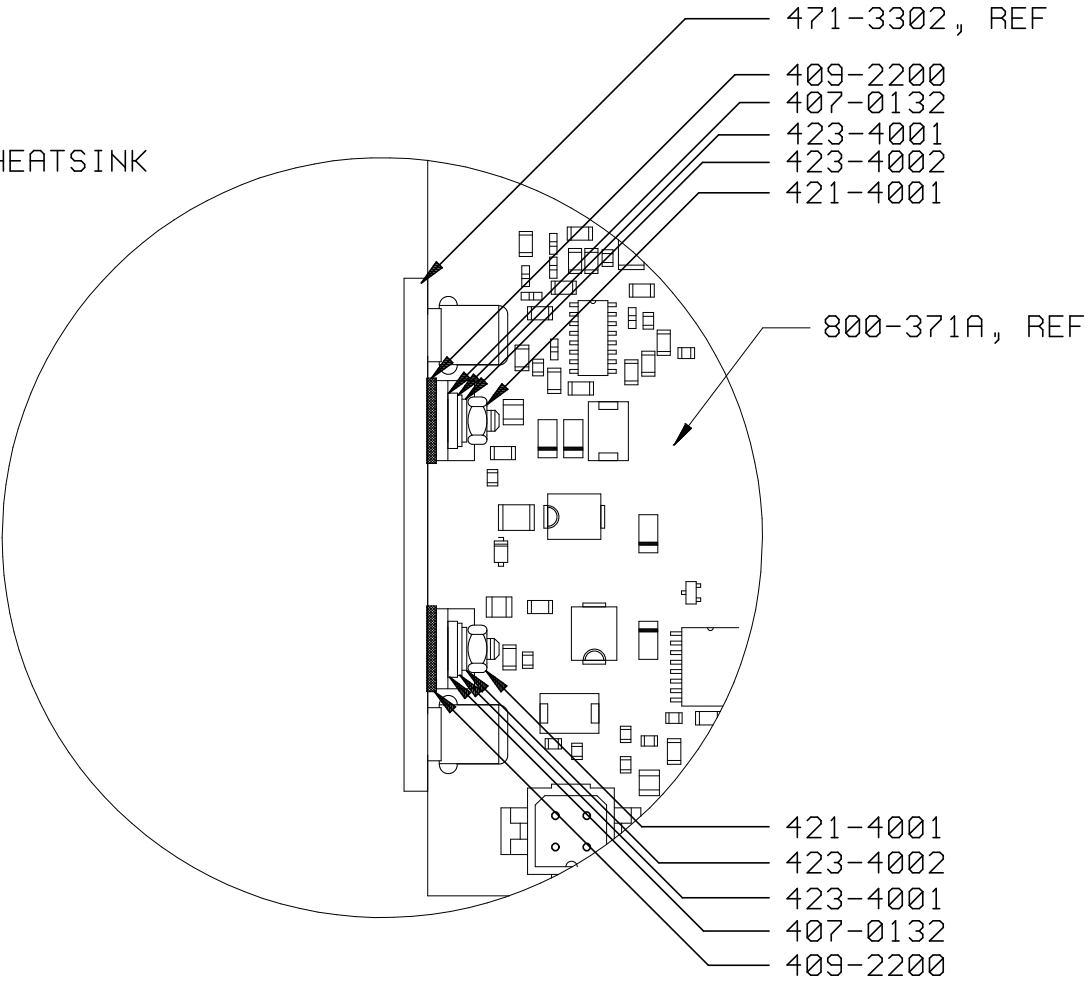

COPYRIGHT © 1999 BROADCAST ELECTRONICS, INC.

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.

TOLERANCE (DECIMAL) U.O.S.  
.X ± .030 .XXX ± .005  
.XX ± .015 ANGLES + 1°

DWN. BY 4-29-99  
MSE

DESIGNER(S)

PROJ. LEADER  
LRF 5/13/99

MFG.

MATERIAL  
SEE BOM  
800-371A

FINISH

NEXT ASSY.



BROADCAST ELECTRONICS INC.


4100 N. 24TH ST. P.O.BOX 3606 QUINCY,IL. 62305  
217/224-9600 FAX 217/224-9607

TITLE  
MOTHER BOARD

TYPE A	SIZE B	DWG No. 800-371A	REV E
-----------	-----------	---------------------	----------

MODEL GX-500	SCALE NTS	SHEET 2 OF 2
--------------	-----------	--------------


REVISIONS				
REV	DATE	DESCRIPTION	DRAFTER	APPROVED
1	1-5-99	PROTOTYPE RELEASE	KT	-----
A	5-13-99	ENGINEERING RELEASE	KT	LF
B	5-21-01	CHGD J15 & J16; BOARD # WRS 913-2101	KT	10446

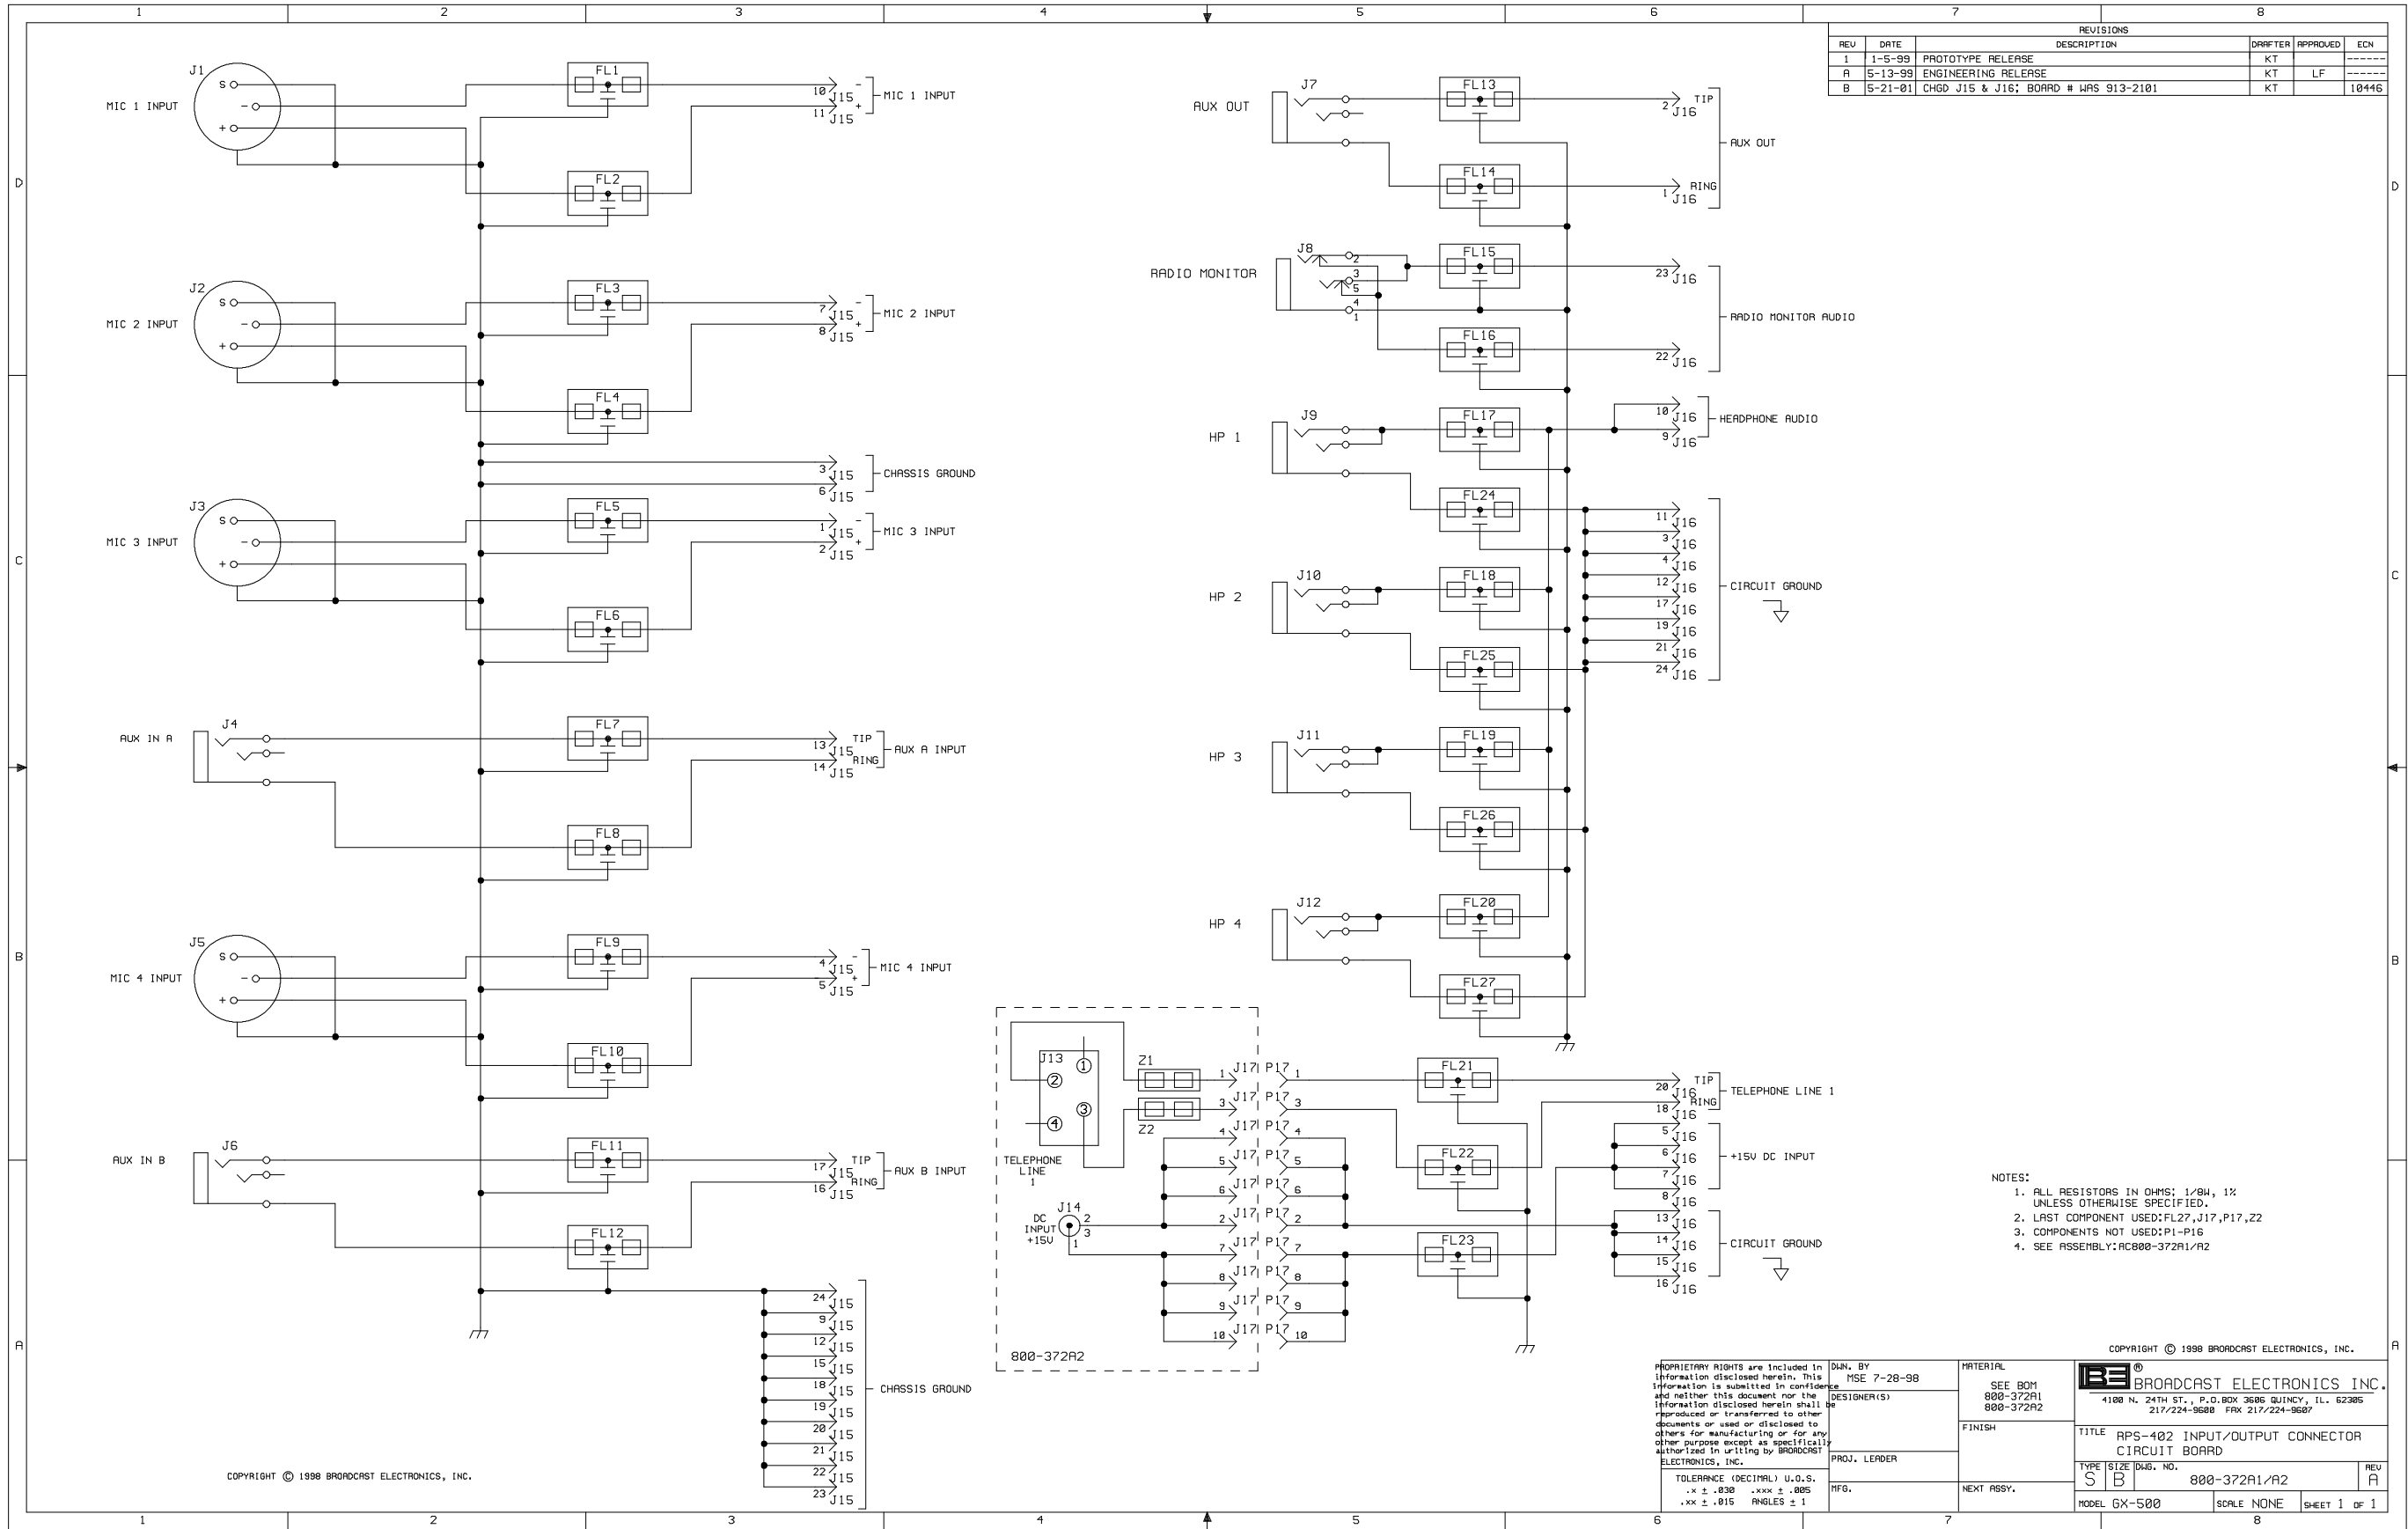


PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.	DRAWN BY MSE 7-28-98	MATERIAL SEE BOM 800-372A1 800-372A2
	DESIGNER(S)	FINISH
	PROJ. LEADER	NEXT ASSY.
	MFG.	

BROADCAST ELECTRONICS, INC. 4100 N. 24TH ST., P.O. BOX 3606 QUINCY, IL. 62305 217/224-9688 FAX 217/224-9687			
TITLE APS-402 INPUT/OUTPUT CONNECTOR CIRCUIT BOARD			
TYPE S	SIZE B	DWG. NO. 800-372A1/A2	REV A
MODEL GX-500	SCALE NONE	SHEET 1 OF 1	

T

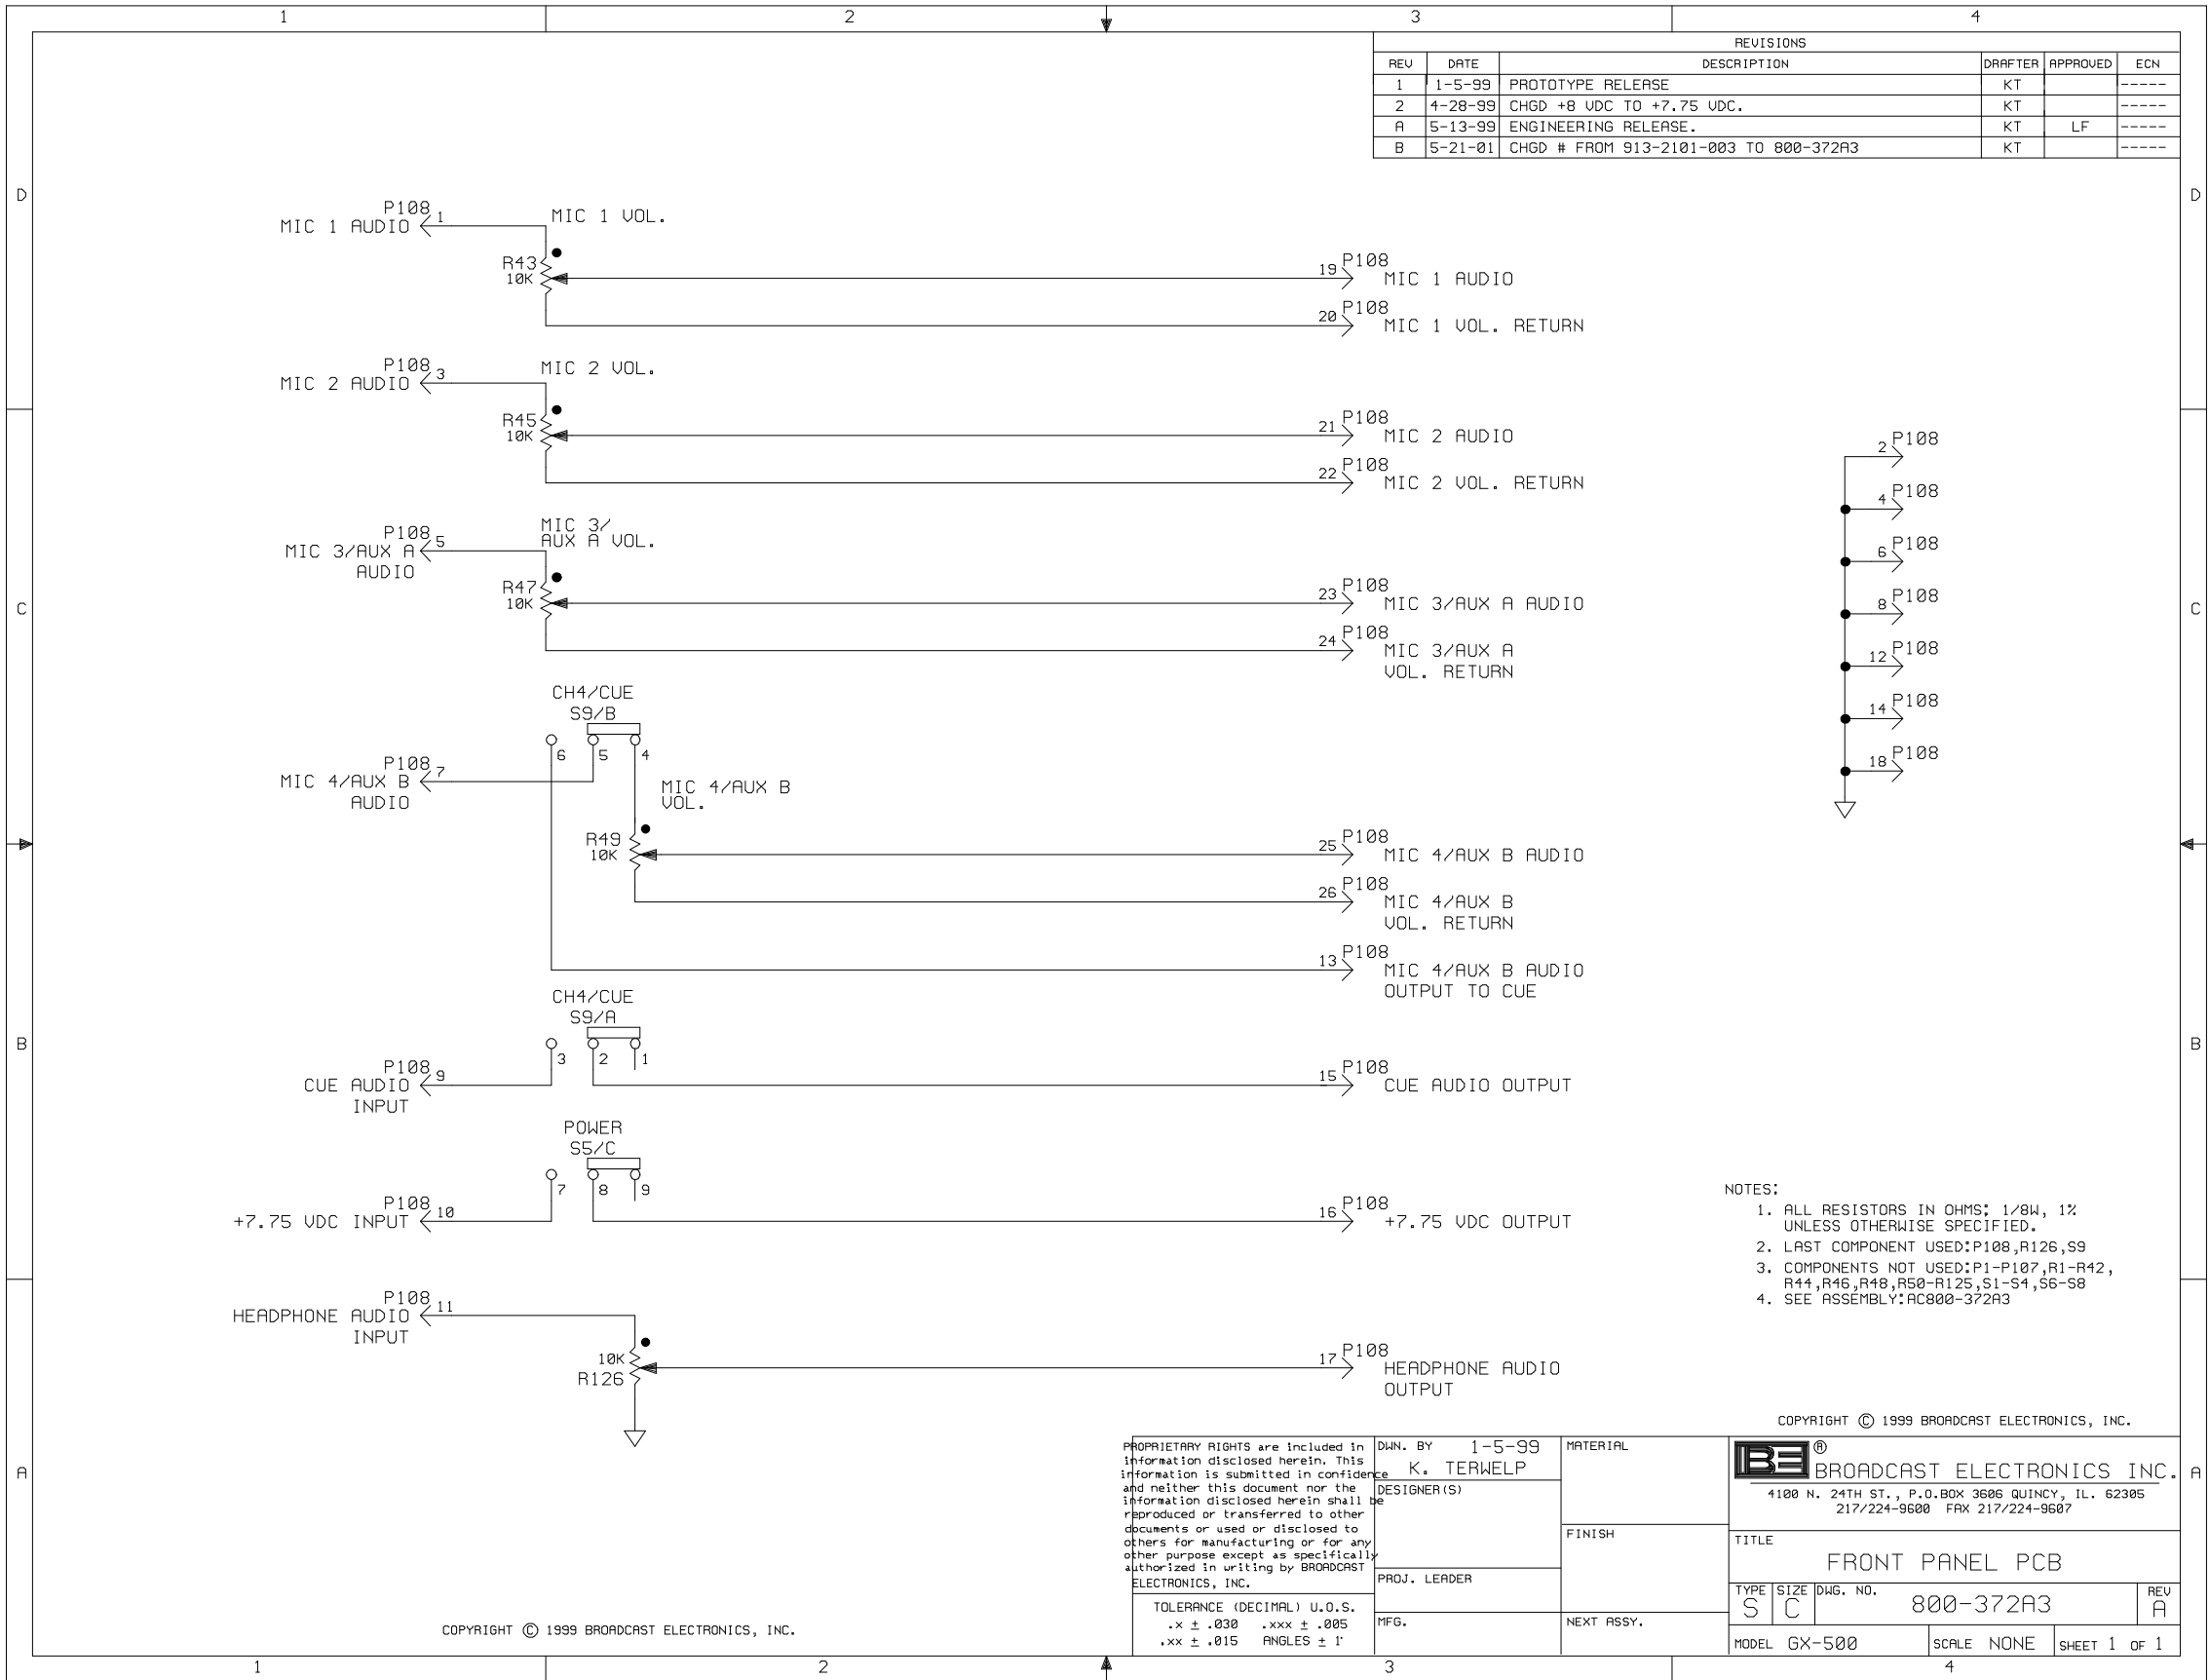

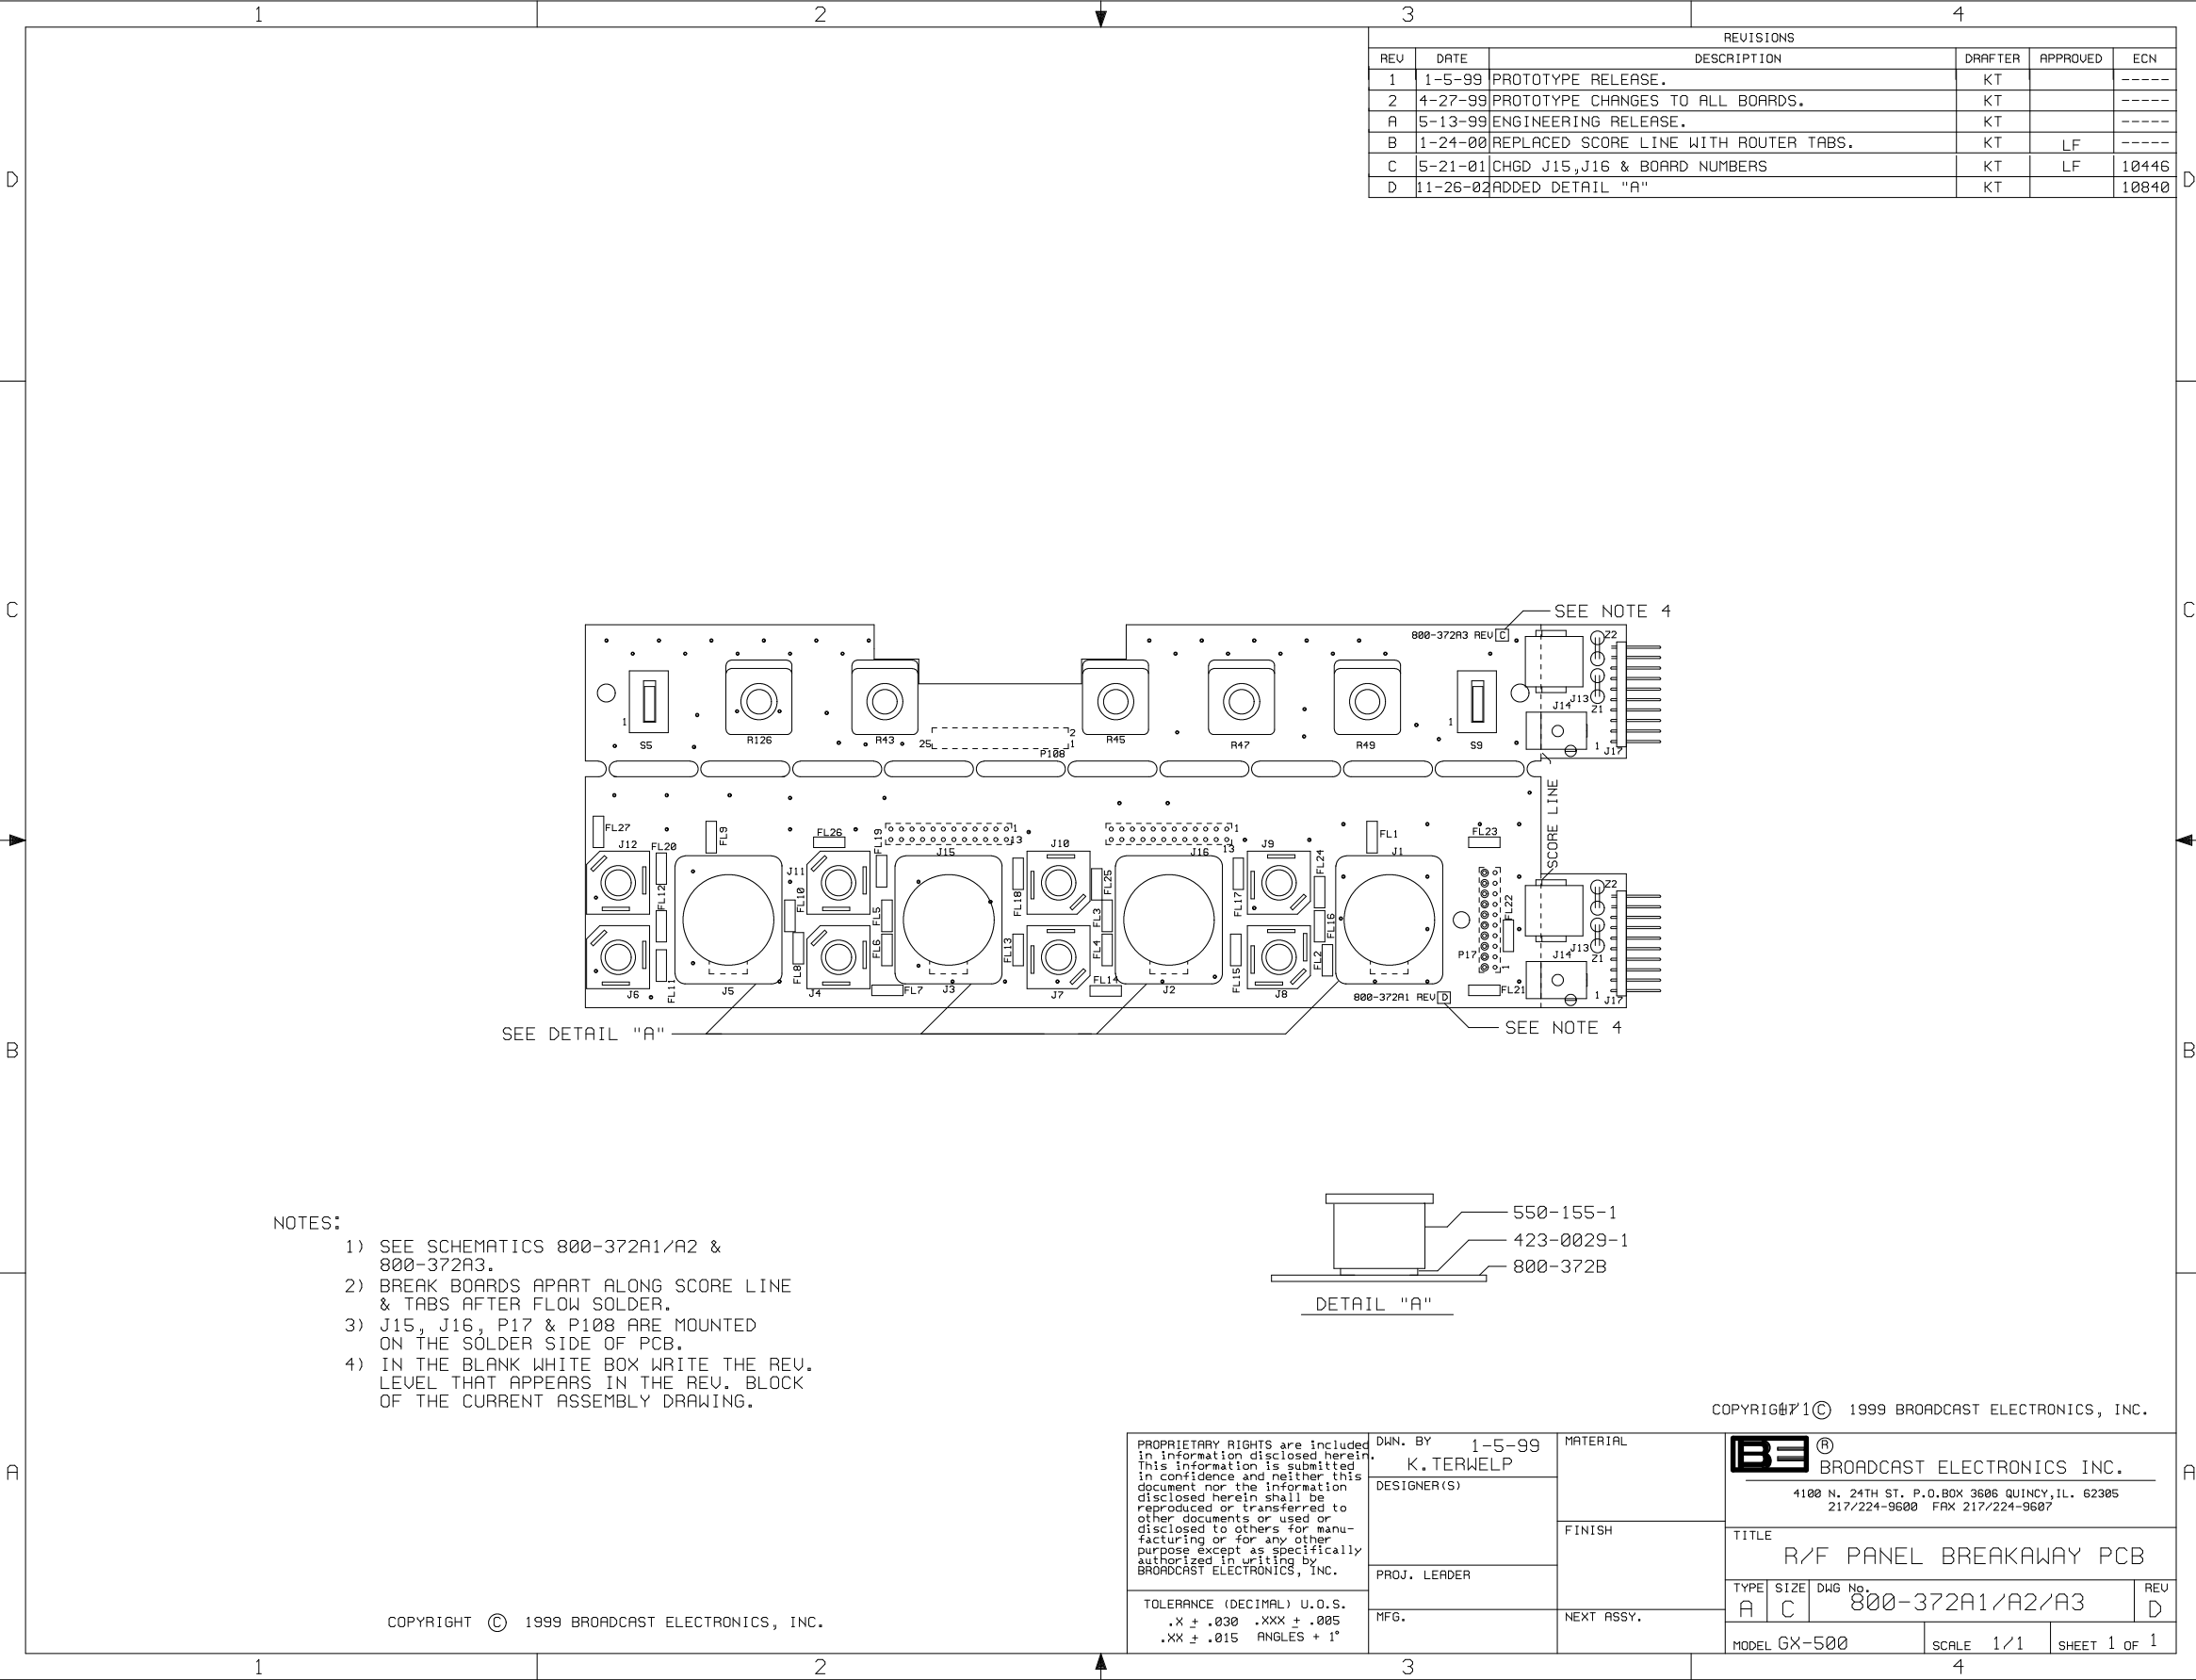

SEE DETAIL "A"

SEE NOTE 4

SEE NOTE 4

NOTES:

1) SEE SCHEMATICS 800-372A1/A2 & 800-372A3.

2) BREAK BOARDS APART ALONG SCORE LINE & TABS AFTER FLOW SOLDER.

3) J15, J16, P17 & P108 ARE MOUNTED ON THE SOLDER SIDE OF PCB.

4) IN THE BLANK WHITE BOX WRITE THE REV. LEVEL THAT APPEARS IN THE REV. BLOCK OF THE CURRENT ASSEMBLY DRAWING.

550-155-1

423-0029-1

800-372B

DETAIL "A"

PROPRIETARY RIGHTS are included in information disclosed herein. This information is submitted in confidence and neither this document nor the information disclosed herein shall be reproduced or transferred to other documents or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by BROADCAST ELECTRONICS, INC.

DWN. BY

1-5-99

MATERIAL

DESIGNER(S)

K. TERWELP

FINISH

PROJ. LEADER

MFG.

NEXT ASSY.

TOLERANCE (DECIMAL) U.O.S.

.X ± .030 .XXX ± .005

.XX ± .015 ANGLES ± 1°

COPYRIGHT © 1999 BROADCAST ELECTRONICS, INC.

COPYRIGHT © 1999 BROADCAST ELECTRONICS, INC.

BE®

BROADCAST ELECTRONICS INC.

4100 N. 24TH ST. P.O.BOX 3606 QUINCY,IL. 62305

217/224-9600 FAX 217/224-9607

TITLE

R/F PANEL BREAKAWAY PCB

TYPE

A

SIZE

C

DWG No.

800-372A1/A2/A3

REV

D

MODEL GX-500

SCALE

1/1

SHEET

1 OF 1